



# 2012

## CATALOGUE

**WINDOW LEVER MECHANISM PARTS**  
[www.alplastik.net](http://www.alplastik.net)

W-1

VOLKSWAGEN GROUP

alp

Code: 200

97-03

8D0 863 821



M

PASSAT ÖN MUHAFAZA-W001  
FRONT CARTER SHIELD PLASTIC

Code: 201

97-03

8D0 863 822



M

PASSAT ARKA MUHAFAZA-W002  
BACK CARTER SHIELD PLASTIC

Code: 202

98-03

1J0 825 250



L

GOLF 4-BORA ÖN MUHAFAZA-W003-L  
FRONT SHIELD PLASTIC-LEFT

Code: 203

98-03

1J0 825 237A



M

GOLF 4-BORA ÖN MUHAFAZA-W003-M  
FRONT SHIELD PLASTIC-CENTER

Code: 204

98-03

1J0 825 245



R

GOLF 4-BORA ÖN MUHAFAZA-W003-R  
FRONT SHIELD PLASTIC-RIGHT

Code: 205

98-03

1J0 825 237B



M

GOLF 4-BORA ÖN MUHAFAZA-W004  
OCTAVIA FRONT SHIELD DIESEL

Code: 206

96-02

6K0 825 254



M

POLO CLASIC ÖN MUHAFAZA-W005  
CORDOBA FRONT CARTER SHIELD

Code: 207

94-98

1H0 825 235



M

GOLF 3 DİZEL ÖN MUHAFAZA-W074  
CARTER FRONT SHIELD PLASTIC

Code: 208

03-09

7H0 805 687



M

TRANSPORTER T5 MUHAFAZA-W075  
T5 (1.9) - SHIELD PLASTIC

Code: 209

96-02



TRANSPORTER T4 ORTA - W064  
CENTER STEP PLASTIC

Code: 210

96-02

B 701 864 445



TRANSPORTER ARKA - W065  
T4 - BACK STEP PLASTIC

Code: 211

97-03

3B0 809 961 E



L

PASSAT E.M ÖN DAVLUMBAZ - W055-L  
FRONT PADDLE BOX PLASTIC-LEFT

Code:212

97-03

Code: 213

98-03

Code:214

98-03

3B0 809 962 E



R

1J0 809 961



L

1J0 809 962



R

PASSAT E.M ÖN DAVLUMBAZ-W055-R  
FRONT PADDLE BOX PLASTIC-RIGHT

GOLF 4-BORA ÖN DAVLUMBAZ-W056-L  
FRONT MUDGUARD PADDLE BOX-LEFT

GOLF 4-BORA ÖN DAVLUMBAZ-W056-R  
FRONT MUDGUARD PADDLE BOX-RIGHT

Code: 215

97-02

Code: 216

97-02

Code: 217

98-02

6K5 809 961



L

6K5 809 962



R

6N0 809 961



L

POLO CLASIC ÖN DAVLUMBAZ-W057-L  
FRONT MUDGUARD PADDLE BOX-LEFT

POLO CLASIC ÖN DAVLUMBAZ-W057-R  
FRONT MUDGUARD PADDLE BOX-RIGHT

POLO HB ÖN DAVLUMBAZ-W058-L  
FRONT MUDGUARD PADDLE BOX-LEFT

Code: 218

98-02

Code: 219

03-08

Code: 220

03-08

6N0 809 962



R

6Q0 809 957



L

6Q0 809 958



R

POLO HB ÖN DAVLUMBAZ-W058-R  
FRONT MUDGUARD PADDLE BOX-RIGHT

POLO HB ÖN DAVLUMBAZ-W059-L  
FRONT MUDGUARD PADDLE BOX-LEFT

POLO HB ÖN DAVLUMBAZ-W059-R  
FRONT MUDGUARD PADDLE BOX-RIGHT

Code: 221

03-08

Code: 222

Code: 223- Code:224

3B0 809 957



L

3B0 809 958



R

PASSAT ÖN DAVLUMBAZ -W060-L  
2003-2008 - SOL

PASSAT ÖN DAVLUMBAZ -W060-R  
2003-2008 - SAĞ

GOLF 4-BORA CAM PLASTIĞI-W06-L  
1998-2003  
W06-R



L

Universal



R

Code: 225

97-03



L

PASSAT ÖN CAM PLASTİĞİ -W007-L  
FRONT WINDOW LEVER PLASTIC-LEFT

Code: 226

97-03



R

PASSAT ÖN CAM PLASTİĞİ- W007-R  
FRONT WINDOW LEVER PLASTIC-RIGHT

Code: 227

98-03



L

P.CLASSIC ÖN CAM PLASTİĞİ- W008-L  
FRONT WINDOW LEVER PLASTIC-LEFT

Code: 228

98-03



R

P.CLASSIC ÖN CAM PLASTİĞİ -W008-R  
FRONT WINDOW LEVER PLASTIC-RIGHT

Code: 229

97-03



L

P.CLASSIC ÖN CAM PLASTİĞİ -W009-L  
FRONT WINDOW LEVER PLASTIC-LEFT

Code: 230

97-03



R

P.CLASSIC ÖN CAM PLASTİĞİ -W009-R  
FRONT WINDOW LEVER PLASTIC-RIGHT

Code: 231

97-03



L

P.CLASSIC ARKA CAM PLASTİĞİ -W010-L  
BACK WINDOW LEVER PLASTIC-LEFT

Code: 232

97-03



R

P.CLASSIC ARKA CAM PLASTİĞİ -W010-R  
BACK WINDOW LEVER PLASTIC-RIGHT

Code: 233-

Code:234



L

Universal

R

98-03

GOLF 4-BORA ÖN CAM PLASTİĞİ-W011-L-R  
FRONT WINDOW LEVER PLASTIC

Code: 235-236

98-03



L

Universal

R

TOLEDO-FABIA ÖN CAM - W012-L -R  
FRONT WINDOW LEVER PLASTIC

Code: 237

97-03



L

GOLF 4- ARKA CAM PLASTİĞİ -W013-L  
BACK WINDOW LEVER PLASTIC-LEFT

Code: 238

97-03



R

GOLF 4 -ARKA CAM PLASTİĞİ -W013-R  
BACK WINDOW LEVER PLASTIC-RIGHT

Code: 239

01-09



L

 OKTAVIA CAM PLASTİĞİ - W014-L  
 WINDOW LEVER PLASTIC - NUMBER 1

Code: 240

01-09



R

 OKTAVIA CAM PLASTİĞİ - W014-R  
 WINDOW LEVER PLASTIC - NUMBER 2

Code: 241

98-03



L

 GOLF 4-BORA ÖN AYAKLI - W0081-L-R  
 FRONT WINDOW LEVER PLASTIC-LEFT SET

Code: 242

98-03



R

 GOLF 4-BORA ÖN AYAKLI - W0081-R-R  
 FRONT WINDOW LEVER PLASTIC-RIGHT SET

Code: 243 Code:244

03-09



L

Universal

R

 TRANSPORTER T5 CAM PLS-W063-L-R  
 WINDOW LEVER PLASTIC-NUMBER 1

Code: 245

94-98



L

Universal

R

 GOLF 2 -POLO ÖN CAM PLS -W083-L-R  
 FRONT WINDOW LEVER PLASTIC

Code: 246

98-06



L

Universal

R

 AUDI A3-A6 CAM PLASTİĞİ - W084-LR  
 FRONT WINDOW LEVER PLASTIC

Code: 247

98-03



L

 GOLF 4 - BORA CAM KAPAĞI - W102-L  
 FRONT WINDOW LEVER MOTOR COVER

Code: 248

98-03



R

 GOLF 4 -BORA CAM KAPAĞI -W102-R  
 FRONT WINDOW LEVER MOTOR COVER

Code: 249

03-09



L

Universal

R

 TOUAREG-YENİ CADY ÖNCAM W0568-LR  
 WINDOW LEVER PLASTIC SET LEFT-RIGHT

Code: 250

97-03



L

Universal

R

 GOLF 4-CAM KRİKO MAKARA-W015-LR  
 PASSAT WINDOW LEVER PULLEY

Code: 251

97-02



L

 P.CLASSIC CAM MAKARA-SOL-W016-L  
 WINDOW LEVER PULLEY-LEFT

Code: 252

97-02



R

P.CLASSIC CAM MAKARA-SAĞ-W016-R  
WINDOW LEVER PULLEY-RIGHT

Code: 253



Universal

R

L

POLO HB ÖN CAM MAKARA -W017-L-R  
FRONT WINDOW LEVER PULLEY

Code: 254

94-98



Universal

R

L

GOLF 3 ÖN CAM MAKARA -W0569-LR  
FRONT WINDOW LEVER PULLEY

Code: 255

94-02



Universal

R

L

TRANSPORTER T4 CAM MAKARA -W0567  
WINDOW LEVER PULLEY

Code: 256

03-09



L

TRANSPORTER CAM MAKARA -W0570-L  
WINDOW LEVER PULLEY-LEFT DOOR

Code: 257

03-09



R

TRANSPORTER CAM MAKARA -W0570-R  
WINDOW LEVER PULLEY-RIGHT DOOR

Code: 258

98-03



Universal

R

L

GOLF 4 -BORA CAM DİŞLİSİ -W069 -LR  
WINDOW LEVER MOTOR GEAR

Code: 259

97-02



Universal

R

L

PASSAT ÖN CAM HALATI -W18 -LR  
WINDOW LEVER CABLE LEFT-RIGHT

Code: 260

98-03



Universal

R

L

GOLF 4-BORA ÖN CAM HALATI -W19 -LR  
WINDOW LEVER CABLE LEFT-RIGHT

Code: 261

97-02



Universal

R

L

POLO HB ÖN CAM HALATI - W020 - LR  
WINDOW LEVER CABLE LEFT-RIGHT

Code: 262

97-02



L

P.CLASSIC ÖN CAM HALATI - W021 -L  
FRONT WINDOW LEVER CABLE LEFT

Code: 263

97-02



R

P.CLASSIC ÖN CAM HALATI - W021 -R  
FRONT WINDOW LEVER CABLE RIGHT



Code: 264

97-02

Code: 265

03-07

Code: 266

03-09



Universal



Universal



Universal



POLO HB ÖN CAM HALATI -W0120 -LR  
ONE DOOR WINDOW LEVER CABLE

POLO HB ÖN CAM HALATI -W0572 -LR  
WINDOW LEVER CABLE LEFT-RIGHT

GOLF 5- CAM HALATI -W0573 -LR  
FRONT WINDOW LEVER CABLE

Code: 267

03-09

Code: 268

94-98

Code: 269

98-03



Universal



Universal



TRANSPORTER ÖN CAM W063 -LR  
WINDOW LEVER CABLE LEFT-RIGHT

GOLF 3- ÖN CAM HALATI - W0105 -L  
ONE DOOR WINDOW LEVER CABLE (L)

TOLEDO ÖN CAM HALATI -W012 -LR  
FRONT WINDOW LEVER CABLE

Code: 270

98-02

Code: 271

98-02

Code: 272

98-03



Universal



OKTAVIA ÖN CAM HALATI -W053 -L  
FRONT WINDOW LEVER CABLE

OKTAVIA ÖN CAM HALATI -W053 -R  
FRONT WINDOW LEVER CABLE

GOLF 4 ARKA CAM HALATI -W061 -LR  
BACK WINDOW LEVER PLASTIC

Code: 273

97-03

Code: 274

04-08

Code: 275

98-03



Universal



Universal



Universal



PASSAT ARKA CAM HALATI - W062 -LR  
BACK WINDOW LEVER PLASTIC

GOLF 5 ARKA CAM HALATI -W0576-LR  
BACK WINDOW LEVER CABLE

FABIA ÖN CAM HALATI -W054 -LR  
FRONT WINDOW LEVER CABLE

Code: 276

98-03



Universal

R L

GOLF 4 ÖN CAM HALAT -W019-LR-SET  
FRONT WINDOW LEVER CABLE SET

Code: 277

97-02



L

PASSAT ÖN CAM HALAT -W018-L-SET  
FRONT WINDOW LEVER CABLE SET

Code: 278

97-02



R

PASSAT ÖN CAM HALAT -W018-R-SET  
FRONT WINDOW LEVER CABLE SET

Code: 279

97-02



L

POLO HB ÖN CAM HALAT W020 -L -SET  
FRONT WINDOW LEVER CABLE

Code: 280

97-02



R

POLO HB ÖN CAM HALAT W020 -R -SET  
FRONT WINDOW LEVER CABLE SET

Code: 281

97-02



L

P.CLASSIC ÖN CAM HALATI -W021-L-SET  
FRONT WINDOW LEVER CABLE SET

Code: 282

97-02



R

P.CLASSIC ÖN CAM HALAT -W021-R-SET  
FRONT WINDOW LEVER CABLE SET

Code: 283

98-03



Universal

R L

TOLEDO ÖN CAM HALAT-W012-LR-SET  
FRONT WINDOW LEVER CABLE SET

Code: 284

02-07



L

OKTAVIA ÖN CAM HALAT W053-L-SET  
FRONT WINDOW LEVER CABLE SET

Code: 285

02-07



R

OKTAVIA ÖN CAM HALAT-W053-R-SET  
FRONT WINDOW LEVER CABLE SET

Code: 286

98-03



Universal

R L

FABIA ÖN CAM HALATI - W054 SET  
FRONT WINDOW LEVER CABLE SET

Code: 287

03-09



L

TRANSPORTER CAM - W063 -L -SET  
T5 LEFT WINDOW LEVER CABLE





Code: 288

03-09



R

TRANSPORTER CAM -W053 -R-SET  
T5 RIGHT WINDOW LEVER CABLE SET

Code: 289

97-03



L

GOLF 4 -ARKA CAM -W061 -L-SET  
BACK WINDOW LEFT LEVER SET

Code: 290

97-03



R

GOLF 4-ARKA CAM -W061 -R- SET  
BACK WINDOW LEFT LEVER SET

Code: 291

97-03



L

PASSAT - ARKA CAM W062 -L- SET  
BACK WINDOW LEFT LEVER SET

Code: 292

97-03



R

PASSAT - ARKA CAM - W062 -R- SET  
BACK WINDOW RIGHT LEVER SET

Code: 293

97-01



L

P.CLASSIC ARKA CAM -W096 -L-SET  
BACK WINDOW LEFT LEVER SET

Code: 294

97-01



R

P.CLASSIC- ARKA CAM -W097 -R-SET  
BACK WINDOW RIGHT LEVER SET

Code: 295

02-06



L

P.CLASSIC - ARKA CAM -W098 -L-SET  
BACK WINDOW LEFT LEVER SET

Code: 296

02-06



R

P.CLASSIC - ARKA CAM -W099 -R-SET  
BACK WINDOW RIGHT LEVER SET

Code: 297

98-03



L

GOLF 4 ÖN CAM - W019-2 -L- SET  
FRONT WINDOW LEVER SET-WITH COVER

Code: 298

98-03



R

GOLF 4 ÖN CAM -W019-2 -R- SET  
FRONT WINDOW LEVER SET-WITH COVER

Code: 299

98-03



L

GOLF 4 ÖN CAM -W073 -L- SET  
FRONT WINDOW LEVER SET-WITH  
COVER-LEFT-UNBREAKABLE

Code: 300

98-03



R

GOLF 4 ÖN CAM - W073 -R- SET  
FRONT WINDOW LEVER SET-WITH  
COVER-RIGHT-UNBREAKBLE

Code: 301

98-03



L

GOLF 4 ÖN CAM - W019-3 -L-SET  
FRONT WINDOW LEVER W. COVER-W.  
SKID-LEFT

Code: 302

98-03



R

GOLF 4 ÖN CAM - W019-3 -R- SET  
FRONT WINDOW LEVER W. COVER-W.  
SKID-RIGHT

Code: 303

98-03



L

GOLF 4 ÖN CAM - W072 -L- SET  
FRONT WINDOW LEVER W. COVER-  
W. SKID-W.FOOD-LEFT

Code: 304

98-03



R

GOLF 4 ÖN CAM - W072 -R- SET  
FRONT WINDOW LEVER W. COVER-  
W.SKID-W. FOOD-RIGHT

Code: 305

N90775001



TORS BAŞLI VİDA - W031  
UNIVERSAL TORS HEADED SCREW

Code: 306

811807577C



DAVLUMBAZ KLİPSİ - W032  
UNIVERSAL CONNECTION CLIPS

Code: 307

867809966



DAVLUMBAZ KLİPSİ - W033  
UNIVERSAL CONNECTION CLIPS

Code: 308

357827998A



PLAKA - DAVLUMBAZ KLİPSİ - W034  
UNIVERSAL CONNECTION CLIPS

Code: 309

357868143



DAVLUMBAZ PLAKA KLİPSİ - W035  
UNIVERSAL CONNECTION CLIPS

Code: 310



PASSAT MUHAFAZA KLİPSİ - W036  
SHIELD CONNECTION CLIPS

Code: 311

701767290 - BEIGE



TRANSPORTER İÇ KLİPSİ -W037  
UNIVERSAL CONNECTION CLIPS

Code: 312

6186729901C



DAVLUMBAZ KLİPSİ - W076  
UNIVERSAL CONNECTION CLIPS

Code: 313

4A0805121A



MUHAFAZA KLİPSİ - W077  
PASSAT SHIELD CLIPS

Code: 314

1H586384901C



Universal

KAPUT İZALATOR KLİPSİ - W078  
HOOD ISOLATOR CLIPS-SMALL

Code: 315

867863849A01C



Universal

KAPUT İZALATOR KLİPSİ - W079  
HOOD ISOLATOR CLIPS-BIG

Code: 316



Universal

AYNA KUMANDA BURCU - W067  
MIRROR CONTROL REPAIR KIT

Code: 317

1H586384901C



Universal

PANEL KLİPSİ - W086  
TRANSPORTER T5 FRONT PANEL CLIPS

Code: 318

701867299



DÖŞEME KLİPSİ AÇIK GRİ - W028  
T4-T5 FLOORING CLIPS -LIGHT GREY

Code: 319

70186729901C



TAMPON BAĞLANTI KLİPSİ - W029  
BUMPER CONNECTION CLIPS-BLACK

Code: 320

701867299 -DARK GRE



DÖŞEME KLİPSİ KOYU GRİ - W043  
T4-T5 FLOORING CLIPS-LIGHT GREY

Code: 321



ÖN PANJUR KLİPSİ - W070  
T4 FRONT PANEL CLIPS

Code: 322



Universal

KAPI KİLİT BURCU UZUN (1) - W038  
DOOR LOCK REPAIR KIT-LONG-NUMBER 1

Code: 323



Universal

KAPI KİLİT ÜÇ AYAK - W039  
DOOR LOCK REPAIR KIT-THREE  
FOOTED SECMAN

Code: 324



Universal

KAPI KİLİT KANALI SEKMAN - W040  
DOOR LOCK REPAIR KIT-CHANNELED  
SECMAN

Code: 325



Universal

KAPI KİLİT BÜYÜK KAPAK - W041  
DOOR LOCK REPAIR KIT-BIG SLEEVES  
COVER

Code: 326



Universal

KAPI KİLİT BURCU B.YAY - W042  
DOOR LOCK REPAIR KIT-BIG SPRING

Code: 327



Universal

KAPI KİLİT BURCU UZUN (2) - W044  
DOOR LOCK REPAIR KIT-LONG-NUMBER 2

Code: 328



Universal

KAPI KİLİT BURCU UZUN (3) - W045  
DOOR LOCK REPAIR KIT-LONG-NUMBER 3

Code: 329



Universal

KAPI KİLİT İKİ AYAKLI - W046  
DOOR LOCK REPAIR KIT-TWO  
FOOTED SECMAN

Code: 330



Universal

KAPI KİLİT KANALSIZ SEKMAN - W047  
DOOR LOCK REPAIR KIT-UNCHAN-  
NELED SECMAN

Code: 331



Universal

KAPI KİLİT K.YÜKSÜK - W048  
DOOR LOCK REPAIR KIT-SMALL  
SLEEVES COVER

Code: 332



Universal

KAPI KİLİT BURCU UZUN (4) - W049  
DOOR LOCK REPAIR KIT - LONG  
NUMBER 4

Code: 333



Universal

KAPI KİLİT BURCU U.KANCALI - W050  
DOOR LOCK REPAIR KIT-LONG HOOKED

Code: 334



Universal

KAPI KİLİT BURCU K.KANCALI -W051  
DOOR LOCK REPAIR KIT-SHORT HOOKED

Code: 335



Universal

KAPI KİLİT KISA YAY - W052  
DOOR LOCK REPAIR KIT-SHORT SPRING

Code: 336



Universal

KAPI KİLİT BURCU SETİ - W038 -SET  
DOOR LOCK REPAIR KIT - LONG  
NUMBER 1 SET

Code: 337



Universal

KAPI KİLİT BURCU SETİ - W044 -SET  
DOOR LOCK REPAIR KIT - LONG  
NUMBER 2 SET

Code: 338



Universal

KAPI KİLİT BURCU SETİ - W045 -SET  
DOOR LOCK REPAIR KIT - LONG  
NUMBER 3 SET

Code: 339



Universal

KAPI KİLİT BURCU SETİ - W049 - SET  
DOOR LOCK REPAIR KIT - LONG  
NUMBER 4 SET

Code: 340



Universal

KAPI KİLİT BURCU SETİ - W050 -SET  
DOOR LOCK REPAIR KIT-LONG-  
HOOKED SET

Code: 341



Universal

KAPI KİLİT BURCU SETİ - W051 - SET  
DOOR LOCK REPAIR KIT-SHORT-  
HOOKED SET

Code: 342



Universal

ORTA KAPI RAY ALT KOLU - W023 -K  
TRANSPORTER T4 DOOR RAIL  
BOTTOM HANDLE - SHORT - W023 - K

Code: 343



Universal

ORTA KAPI RAY KOLU - W023 - U  
TRANSPORTER T4 DOOR RAIL  
BOTTOM HANDLE-LONG- W023-U

Code: 344



VİTES TAMİR BURCU - W025-T  
TRANSPORTER T4 GEAR REPAIR KIT

Code: 345




VİTES TAMİR BURCU - W025-Y  
TRANSPORTER T4 GEAR REPAIR KIT

Code: 346



FAR AYAK KLİPSİ KARE - W027-K  
T4 HEADLIGHT SETTING CLIPS-SQUARE

Code: 347

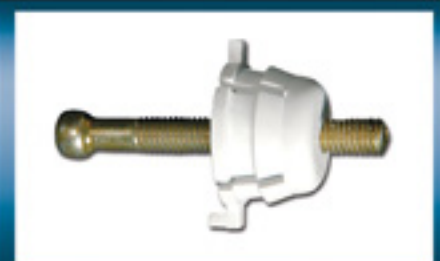

FAR AYAK KLİPSİ YUVARLAK -W027-Y  
T4 HEADLIGHT SETTING CLIPS-ROUND

Code: 348



RADYATÖR BAĞLANTI AYAĞI - W066  
T4 RADIATOR CONNECTION FOOT

Code: 349



İZOLASYON SEKMANI - W068  
UNIVERSAL ISOLATION SHEET SECMAN

Code: 350



Universal

CAM SIKIŞTIRMA PLASTİĞİ - W071  
FRONT WINDOW COMPRESSION PLASTIC

Code: 351



MOTOR YAĞ KAPAĞI UFAK - W0351  
GOLF4-BORA MOTOR OIL COVER-SMALL

Code: 352



MOTOR YAĞ KAPAĞI BÜYÜK - W0352  
PASSAT MOTOR OIL COVER-BIG

Code: 353

97-06



L

PASSAT ÖN CAM PLASTİĞİ - W353-L  
FRONT LEFT WINDOW LEVER  
PLASTIC - UNBREAKABLE

Code: 354

97-06



R

PASSAT ÖN CAM PLASTİĞİ - W354-R  
FRONT RIGHT WINDOW LEVER  
PLASTIC - UNBREAKABLE

Code: 355



Universal

R

L

AUDI A3-A6 ÖN CAM HALATI-W0355-LR  
FRONT WINDOW LEVER CABLE

Code: 356



Universal

R

L

AUDI A3-A6 ARKACAM HALATI-W0355-LR  
BACK WINDOW LEVER CABLE

Code: 357



Universal

R

L

AUDI A4 ÖN CAM HALATI - W357  
FRONT WINDOW LEVER CABLE

Code: 358



Universal

R

L

AUDI A4 ÖN CAM SETİ - W358  
FRONT LEFT WINDOW LEVER CABLE

Code: 359



L

Universal

R

AUDI A4 ÖN CAM SET PLASTİĞİ - W359  
FRONT WINDOW LEVER PLASTIC SET

Code: 360



Universal



Code: 361



Universal- 1



Code: 362



Universal



GOLF 4 KIZAK MAKARASI  
UNIVERSAL WINDOW SKID PULLEY

PASSAT ARKA KASA MOTOR DİŞLİSİ  
BACK CASE WINDOW MOTOR GEAR

TRANSPORTER T5 CAM MOTOR DİŞLİSİ  
WINDOW MOTOR GEAR

Code: 363



Universal-2



Code: 364



Universal



Code: 365



PASSAT ARKA KASA CAM MOTOR DİŞLİSİ  
BACK CASE WINDOW MOTOR GEAR

POLO - GOLF 5 CAM MOTOR DİŞLİSİ  
NEW GROUP WINDOW LEVER MOTOR GEAR

P.CLASSIC - CAM KAPAĞI - W0365  
WINDOW LEVER MOTOR COVER

Code: 366



Code: 367

94-98



Code: 368

94-98



P.CLASSIC - CAM KAPAĞI - W0366  
WINDOW LEVER MOTOR COVER

GOLF 3 ÖN CAM KRİKO HALAT 4 KAPI  
FRONT WINDOW LEVER CABLE

GOLF 3 ÖN CAM KRİKO HALAT 4 KAPI  
FRONT WINDOW LEVER CABLE

Code: 369

03-06



Code: 370

03-06



Code: 371

03-06



Universal



PASSAT ÖN CAM SETİ - W0369  
FRONT LEFT WINDOW LEVER SET

PASSAT ÖN CAM SETİ -W0370  
FRONT RIGHT WINDOW LEVER SET

YENİ MODEL CAM KIZAK DİŞLİSİ-W0371  
NEW MODEL WINDOW SKID UPPER  
PULLEY-PINNED

Code: 372

03-09



L

SEAT TOLEDO-FABIA ARKA PLASTIĞI  
BACK WINDOW LEVER PLASTIC

Code: 373

03-09



R

SEAT TOLEDO-FABIA ARKA PLASTIĞI  
BACK WINDOW LEVER PLASTIC

Code: 374

03-06



L

POLO HB ÖN CAM MAKARASI  
WINDOW LEVER MOTOR PULLEY

Code: 375

03-06



R

POLO HB ÖN CAM MAKARA  
WINDOW LEVER MOTOR PULLEY

Code: 376

03-09



Universal

R

L

YENİ CADY CAM KRİKO HALATI  
NEW CADY WINDOW LEVER CABLE

Code: 377

03-09



Universal

R

L

YENİ CADY CAM KRİKO HALAT SETİ  
NEW CADY WINDOW LEVER CABLE SET

Code: 378

03-08



L

AUDI A4 ÖN CAM KRİKO SETİ  
FRONT LEFT COVERED WINDOW  
LEVER CABLE SET

Code: 379

03-08



R

AUDI A4 ÖN CAM KRİKO SETİ  
FRONT RIGHT COVERED WINDOW  
LEVER CABLE SET

Code: 380

03-08



L

AUDI A4 ARKA CAM KRİKO PLASTIĞI  
BACK WINDOW LEVER PLASTIC

Code: 381

03-08



R

AUDI A4 ARKA CAM KRİKO PLASTIĞI  
BACK WINDOW LEVER PLASTIC

Code: 382

98-06



L

FABIA ÖN CAM KRİKO HALAT SETİ  
FRONT LEFT COVERED WINDOW  
LEVER CABLE SET

Code: 383

98-06



R

FABIA ÖN CAM KRİKO HALAT SETİ  
FRONT RIGHT COVERED WINDOW  
LEVER CABLE SET



Code: 384

98-06



TOLEDO ÖN CAM KRİKO HALAT SETİ  
FRONT LEFT COVERED WINDOW  
LEVER CABLE SET

Code: 385

98-06



TOLEDO ÖN CAM KRİKO HALAT SETİ  
FRONT RIGHT COVERED WINDOW  
LEVER CABLE SET

Code: 386

98-06



FABIA ARKA CAM KRİKO HALAT SETİ  
BACK WINDOW LEVER CABLE SET

Code: 387

98-06



FABIA ARKA CAM KRİKO HALAT SETİ  
BACK WINDOW LEVER CABLE SET

Code: 388

98-06



TOLEDO ARKA CAM KRİKO HALAT SETİ  
BACK WINDOW LEVER CABLE SET

Code: 389

98-06



TOLEDO ARKA CAM KRİKO HALAT SETİ  
BACK WINDOW LEVER CABLE SET

Code: 390

96-02



TRANSPORTER T4 ORTA KAPI BİLYASI  
CENTER DOOR BALL BEARING-W030

Code: 391

03-09



TRANSPORTER T5 ORTA KAPI BİLYASI  
T5 CENTER DOOR BALL BEARING

Code: 392



Universal  
PASSAT CAM MOTOR ALT DIŞLISI  
WINDOW LEVER MOTOR BOTTOM GEAR

Code: 393

98-03



BORA -JETTA BAGAJ TAMİR PLASTİĞİ  
LUGGAGE LOCK PLASIC

Code: 394

96-02



CORDOBA-IBIZA KAPI AÇMA KOLU SOL  
OPENING LEVER -LEFT

Code: 395

96-02



CORDOBA-IBIZA KAPI AÇMA KOLU SAĞ  
OPENING LEVER -RIGHT

Code: 396

98-03



PASSAT CAM MOTOR DİŞLİSİ  
PASSAT WINDOW GEAR MOTOR

Code: 397

93-98



GOLF III KOLTUK KIZAK PLASTİĞİ  
ARMCHAIR GOLF III OF PLASTIC RACK

Code: 398

94-98



GOLF 3TEK KAPI SAĞ HALAT  
FRONT WINDOW LEVER CABLE (RIGHT)

Code: 399

98-06



UNİVERSAL CAM SIKIŞTIRMA PLASTİĞİ

Code: 101

98-06



L

SHARAN ÖN CAM KRİKO PLASTİĞİ-SOL  
FRONTWINDOW LEVER PLASTIC-LEFT

Code: 102

98-06



R

SHARAN ÖN CAM KRİKO PLASTİĞİ-SAĞ  
FRONTWINDOW LEVER PLASTIC-RIGHT

Code: 103

03-09



L

POLO HB YENİ MODEL PLASTİK SETİ  
WINDOW LEVER MECHANISM PLASTIC

Code: 104

96-98



POLO CLASIC ESKİ MODEL MAKARA  
WINDOW MECHANISM BOBİN

Code: 105

98-03



TOLEDO-FABİA CAM KRİKO PLASTİĞİ  
FRONT WINDOW MECHANISM PLASTIC

Code: 106

98-03



TOLEDO-FABİA CAM KRİKO PLASTİĞİ  
FRONT WINDOW MECHANISM PLASTIC

Code: 107

03-09



R

POLO HB YENİ MODEL PLASTİK SETİ  
WINDOW LEVER MECHANISM PLASTIC

Code: 108

98-03



TOLEDO -LEON ARKA CAM HALATI  
WINDOW LEVER CABLE

Code: 109

96-03

Code: 110

96-03

Code: 111

06-2010



L



R



3 PARÇA TEL

AUDI A3- ÖN CAM KRİKO MAKARASI  
FRONT WINDOW BOBİN LEFT -SOL

AUDI A3- ÖN CAM KRİKO MAKARASI  
FRONT WINDOW BOBİN RIGHT -SAĞ

OKTAVİA -V -ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

Code: 112

96-03

Code: 113

96-03

Code: 114

98-09



L



R



L

AUDI A6- ÖN CAM KRİKO MAKARASI  
FRONT WINDOW BOBİN LEFT -SOL

AUDI A6- ÖN CAM KRİKO MAKARASI  
FRONT WINDOW BOBİN RIGHT -SAĞ

PASSAT GOLF 5 ARKA CAM PLS SOL KAPI  
REAR WINDOW LEVER PLASTIC-LEFT

Code: 115

98-09

Code: 116

98-09

Code: 117

98-09



R



L



R

PASSAT GOLF 5 ARKA CAM PLS SAĞ KAPI  
REAR WINDOW LEVER PLASTIC-RIGHT

AUDI GROUP CAM KRİKO KÖŞE PLS SOL KAPI  
WINDOW LEVER PLASTIC-LEFT DOOR

AUDI GROUP CAM KRİKO KÖŞE PLS SAĞ KAPI  
WINDOW LEVER PLASTIC-RIGHT DOOR

Code: 118

97-06

Code: 119

03-09

Code: 120

06-10



L R



L R



L


PASSAT ÖN CAM KRİKO MOTOR KAPAĞI  
WINDOW LEVER PLASTIC LEFT-RIGHT

PASSAT ARKA CAM KRİKO MAKARASI  
REAR WINDOW BOBİN LEFT -RIGHT

PASSAT 5 ARKA CAM KRİKO HALAT SET SOL  
REAR WINDOW LEVER CABLE CIT-LEFT

Code: 121

06-09

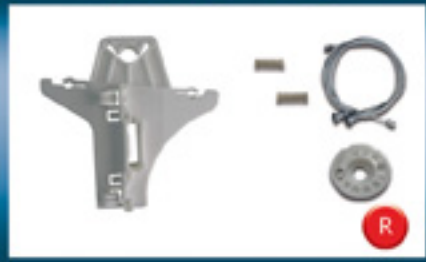

PASSAT 5 ARKA CAM KRİKO HALAT SAĞ SET  
REAR WINDOW LEVER CABLE CIT-RIGHT

Code: 122

04-09



GOLF V- CAM KRİKO PLASTİK SETİ  
WINDOW LEVER PLASTIC CIT-FRONT

Code: 123

04-2010



GOLF V CAM KRİKO MAKARASI SOL  
FRONT WINDOW LEVER BOBİN-LEFT

Code: 124

04-2010



GOLF V CAM KRİKO MAKARASI SAĞ  
FRONT WINDOW LEVER BOBİN-RIGHT

Code: 125

04-09



GOLF V ÖN SOL CAM KRİKO SETİ  
GOLF 5 WINDOW MECHANISM CIT-LEFT

Code: 126


04-09



GOLF V ÖN SAĞ CAM KRİKO SETİ  
GOLF 5 WINDOW MECHANISM CIT -RIGHT

Code: 127

03-09

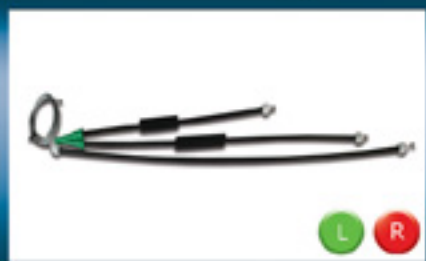

TOUREG ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER MECHANISM CABLE

Code: 128

03-09



TOUREG ÖN CAM KRİKO HALAT SETİ-CIT  
FRONT WINDOW LEVER MECHANISM CABLE

Code: 129

03-09



TOUREG ÖN CAM KRİKO PLASTİK SETİ-CIT  
FRONT WINDOW LEVER PLASTIC -CIT

Code: 130

04-09



POLO HB YENİ MODEL SOL KAPI SETİ  
POLO HB WINDOW CABLE CIT-FRONT LEFT

Code:131

04-09



POLO HB YENİ MODEL SAĞ KAPI SETİ  
POLO HB WINDOW CABLE CIT-FRONT RIGHT

Code: 132

03-09



TOUREG YENİ MODEL SOL KAPI SETİ  
TOUREG WINDOW CABLE CIT-FRONT LEFT

Code: 133

03-10

Code: 134

03-09

Code: 135

98-2006



TOUREG ÖN CAM KRİKO HALAT SAĞ SET  
WINDOW LEVER CABLE CIT-FRONT-RIGHT

TRANSPORTER T5 KOLÇAK ZAMAĞI  
TRANSPORTER T5 ARMREST METAL

PASSAT GOLF4-BORA KONTAK ZAMAĞI  
ZINC ALLOY CONTACTS

Code: 136

98-2006

Code: 137

96-04

Code: 138



SEAT TOLEDO KONTAK ZAMAĞI  
ZINC ALLOY CONTACTS

POLO HB-POLO CLASIC KONTAK ZAMAĞI  
ZINC ALLOY CONTACTS

SKODA FELİCİA KILIT BURCU  
DOOR LOCKS ZINC

Code: 139



03-09

Code: 140

03-09

Code: 141

03-09

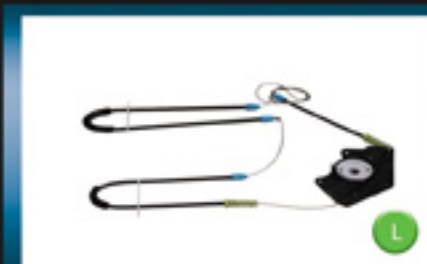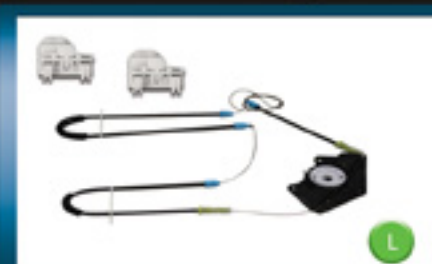

PASSAT ÖN SOL CAM KRİKO HALAT SETİ-SOL  
FRONT WINDOW LEVER MECHANISM CABLE (L)

PASSAT ÖN SOL CAM KRİKO HALAT SETİ-SAĞ  
FRONT WINDOW LEVER MECHANISM CABLE (R)

PASSAT ÖN SOL CAM KRİKO HALAT SETİ-SOL  
FRONT WINDOW LEVER MECHANISM CABLE (L)

Code: 142


99-02

Code: 143

99-03

Code: 144

99-03

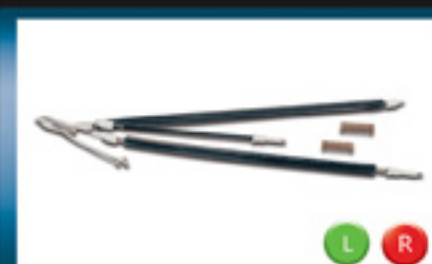

SEAT İBİZA COUPE ÖN CAM KRİKO HALATI  
WINDOW LEVER MECHANISM CABLE-FRONT

AUDİ A3 ÖN CAM KRİKO HALAT SETİ-SOL  
FRONT WINDOW LEVER CABLE CIT LEFT

AUDİ A3 ÖN CAM KRİKO HALAT SETİ-SAĞ  
FRONT WINDOW LEVER CABLE CIT RIGHT

Code: 145

96-03

Code: 146

96-03

Code: 147

94-1997



AUDI A6 ÖN SOL CAM KRIKO HALAT SET  
WINDOW LEVER CABLE CIT-FRONT-LEFT

AUDI A6 ÖN SAĞ CAM KRIKO HALAT SET  
WINDOW LEVER CABLE CIT-FRONT-RIGHT

POLO HB SOL CAM KRIKO HALAT SET  
WINDOW LEVER CABLE CIT-FRONT-LEFT

Code: 148

94-1997

Code: 149

06-09

Code: 150

04-09



POLO HB SAĞ CAM KRIKO HALAT SET  
WINDOW LEVER CABLE CIT-FRONT-RIGHT

AUDI A6 ÖN CAM KRIKO HALATI SOL-SAĞ  
WINDOW LEVER MECHANISM CABLE-(LR)

AUDI A4 ARKA SOL CAM KRIKO SETİ  
WINDOW LEVER MECHANISM CABLE-LEFT

Code: 151


04-09

Code: 152

03-09

Code: 153

1997-02

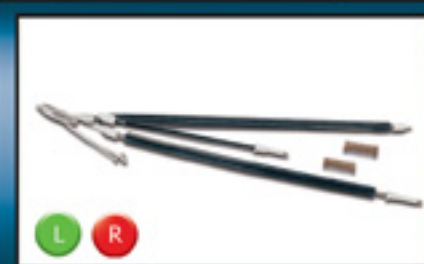

AUDI A4 ARKA SAĞ CAM KRIKO SETİ  
WINDOW LEVER MECHANISM CABLE-RIGHT

GOLF 4 CABRİO ÖN CAM KRIKO HALAT SOL-SAĞ  
FRONT WINDOW LEVER MECHANISM CABLE (LR)

POLO HB ÖN SAĞ CAM KRIKO MAKARASI  
FRONT WINDOW LEVER MECHANISM BOBİN (R)

Code: 154


99-02

Code: 155

04-09

Code: 156

04-09

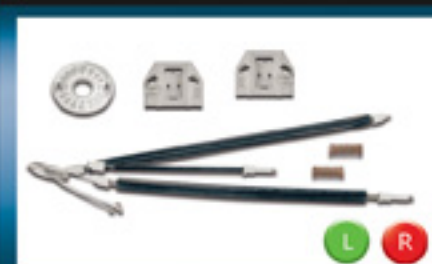

GOLF 4 CABRİO ÖN CAM KRIKO HALAT SOL-SAĞ  
FRONT WINDOW LEVER MECHANISM CIT (LR)

GOLF 5 ARKA CAM KRIKO PLASTİĞİ-SOL  
REAR WINDOW LEVER PLASTIC LEFT

GOLF 5 ARKA CAM KRIKO PLASTİĞİ-SAĞ  
REAR WINDOW LEVER PLASTIC RIGHT

Code: 157

04-09

Code: 158

04-09

Code: 159

97-2004



L



R



L

R

GOLF 5 ARKA SOL CAM KRİKO HALAT SETİ  
REAR WINDOW LEVER CABLE KIT-LEFT

GOLF 5 ARKA SAĞ CAM KRİKO HALAT SETİ  
REAR WINDOW LEVER CABLE KIT-RIGHT

PASSAT ÖN KAPI İÇ AÇMA TELİ  
FRONT DOOR INTERIOR ON WIRE

Code: 160

96-2003

Code: 161

96-03

Code: 162

99-02



L



R



R

L

AUDİ A3 COUPE CAM KRİKO HALAT SET-SOL  
FRONT WINDOW LEVER CABLE KIT-LEFT(8L)

AUDİ A3 COUPE CAM KRİKO HALAT SET-SAĞ  
FRONT WINDOW LEVER CABLE KIT-RIGHT(8L)

SEAT İBİZA COUPE CAM KRİKO SETİ  
WINDOW LEVER MECHANISM CABLE-(LR)

Code: 163

07-03

Code: 164

96-02

Code: 165

1996-06



L

R



L

PASSAT CAM KRİKO MOTOR DIŞLİSİ  
WINDOW LEVER ENGINE PULLEY(LR)

POLO CLASIC KAPI AÇMA BUTONU  
POLO CLASIC DOOR OPEN BUTTON

SHARAN ÖN SOL CAM KRİKO SETİ  
FRONT WINDOW LEVER MECHANISM KIT (L)

Code: 166

96-06

Code: 167

05-11

Code: 168

05-11



R



L

R



L

SHARAN ÖN SAĞ CAM KRİKO SETİ  
FRONT WINDOW LEVER MECHANISM KIT (R)

BEETLE ÖN CAM KRİKO HALAT SETİ-SOL-SAĞ  
FRONT WINDOW LEVER CABLE KIT (LR)

BEETLE ÖN CAM KRİKO HALAT SETİ-SOL  
FRONT WINDOW LEVER CABLE KIT (LEFT)

Code: 169

05-11

Code: 170

06-10

Code: 171


06-2010



R



L

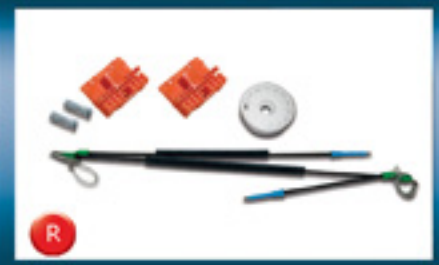

R

BEETLE ÖN CAM KRİKO HALAT SETİ-SAĞ  
FRONT WINDOW LEVER CABLE KIT (RIGHT)

AUDI A6 ÖN SOL CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE KIT-LEFT

AUDI A6 ÖN SAĞ CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE KIT-RIGHT

Code: 172

05-2009

Code: 173

05-09

Code: 174

1996-06



L



R



L

PASSAT ARKA CAM KRİKO HALAT SET-SOL  
REAR WINDOW LEVER CABLE KIT-LEFT

PASSAT ARKA CAM KRİKO HALAT SET-SAĞ  
REAR WINDOW LEVER CABLE KIT-RIGHT

SEAT ALHAMRA ÖN SOL CAM KRİKO SETİ  
WINDOW LEVER MECHANISM CABLE-(LEFT)

Code: 175

1996-06

Code: 176

96-10

Code: 177

2004-10



R



L

R



L

R

SEAT ALHAMRA ÖN SAĞ CAM KRİKO SETİ  
FRONT WINDOW LEVER MECHANISM KIT RIGHT

AUDI A6 ÖN CAM KRİKO MAKARASI SOL-SAĞ  
WINDOW LEVER BOBIN-LEFT -RIGHT

AUDI A4 ÖN CAM KRİKO MAKARASI SOL-SAĞ  
WINDOW LEVER BOBIN-LEFT -RIGHT

Code: 178

2006-10

Code:179

06-10

Code: 180

06-10



L



R



L

AUDI A6 ARKA CAM KRİKO PLASTİĞİ SOL  
REAR WINDOW LEVER PLASTIC ( LEFT )

AUDI A6 ARKA CAM KRİKO PLASTİĞİ SAĞ  
REAR WINDOW LEVER PLASTIC ( RIGHT )

AUDI A6 ARKA CAM KRİKO HALAT SETİ SOL  
REAR WINDOW LEVER CABLE KIT ( LEFT )



Code: 181

06-10

Code: 182

97-03

Code: 183

97-2003



AUDI A6 ARKA CAM KRIKO HALAT SETI-SAĞ  
REAR WINDOW LEVER CABLE KIT (RIGHT)

AUDI A4 ÖN SOL CAM KRIKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC -LEFT

AUDI A4 ÖN SAĞ CAM KRIKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC -RIGHT

Code: 184


04-2009

Code: 185

05-09

Code: 186

2006-11

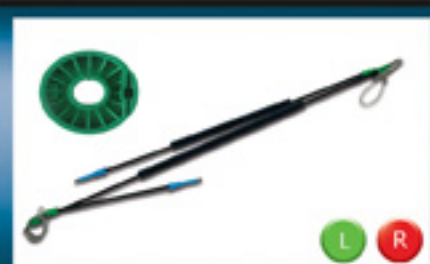

AUDI A3 ÖN CAM KRIKO HALATI-SOL  
FRONT WINDOW LEVER CABLE CIT-( L)

AUDI A3 ÖN CAM KRIKO HALATI-SAĞ  
FRONT WINDOW LEVER CABLE CIT-( R)

AUDI Q7 ÖN CAM KRIKO SETI  
WINDOW LEVER MECHANISM CABLE -(LR)

Code: 187

1998-05

Code: 188

05-10

Code: 189

2005-10



LIPO ÖN SOL-SAĞ CAM KRIKO SETI  
FRONT WINDOW LEVER MECHANISM CIT (LR)

NEW BEETLE CABRIO ÖN SOL CAM KRIKO SETI  
FRONT WINDOW LEVER MECHANISM CIT LEFT

NEW BEETLE CABRIO ÖN SAĞ CAM KRIKO SETI  
FRONT WINDOW LEVER MECHANISM CIT RIGHT

Code: 190

2006-10

Code:191

06-10

Code: 192

06-10



BEETLE -TOLEDO FABIA ÖN CAM KRIKO PLS  
FRONT WINDOW LEVER PLASTIC ( LR )

NEW OKTAVIA ÖN CAM KRIKO PLASTIĞI SOL  
FRONT WINDOW LEVER PLASTIC ( LEFT )

NEW OKTAVIA ÖN CAM KRIKO PLASTIĞI SAĞ  
FRONT WINDOW LEVER PLASTIC ( RIGHT )

Code: 193

05-10

Code: 194

07-11

Code: 195

06-2010



BEETLE CABRIO ÖN CAM KRİKO HALAT  
FRONT WINDOW LEVER CABLE KIT (LR)

SKODA ROSTER ÖN SOL CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE -LEFT-RIGHT

NEW OKTAVIA ÖN CAM KRİKO HALAT-SOL  
FRONT WINDOW LEVER CABLE KIT ( LEFT )

Code: 196

06-2010

Code: 197

04-10

Code: 198

2004-10



NEW OKTAVIA ÖN CAM KRİKO HALAT-SAĞ  
FRONT WINDOW LEVER CABLE KIT (RIGHT)

AUDİ A3 ÖN SOL CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE CIT-( L )

AUDİ A3 ÖN SAĞ CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE CIT-( R )

Code: 199

2004-12

Code: 1201

04-12

Code: 1202

2010-11



AUDİ A3 ÖN CAM KRİKO PLASTİK SOL-SAĞ  
FRONT WINDOW LEVER PLASTIC CIT-( LR)

AUDİ A3 ARKA CAM KRİKO PLASTİK -SOL-SAĞ  
REAR WINDOW LEVER PLASTIC -( LR)

GOLF 6 ÖN CAM KRİKO PLASTİK -SOL-SAĞ  
FRONT WINDOW LEVER PLASTIC -( LR)

Code: 1203

1998-04

Code: 1204

98-04

Code: 1205

1997-2006



GOLF 4 -BORA ÖN CAM KRİKO AYAĞI SOL KAPI  
FRONT WINDOW LEVER STRUCTURAL ZINC-( L )

GOLF 4 -BORA ÖN CAM KRİKO AYAĞI SAĞ KAPI  
FRONT WINDOW LEVER STRUCTURAL ZINC-( R )

PASSAT ÖN CAM KRİKO HALATI SAĞ KAPI  
FRONT WINDOW LEVER CABLE SET ( R )

Code: 1206

1998-04

Code: 1207

98-04

Code: 1208

06-2009



L



R



L

GOLF 4-BORA ÖN CAM KIRIKO SETİ SOL  
FRONT WINDOW LEVER CABLE KIT (L)

GOLF 4-BORA ÖN CAM KIRIKO SETİ SAĞ  
FRONT WINDOW LEVER CABLE KIT (R)

PASSAT ÖN CAM KIRIKO SETİ-SOL  
FRONT WINDOW LEVER CABLE KIT ( LEFT )

Code: 1209

06-2009

Code: 1210

97-03

Code: 1211

1997-03



R



L



R

PASSAT ÖN CAM KIRIKO SETİ-SAĞ  
FRONT WINDOW LEVER CABLE KIT ( RIGHT )

AUDİ A4 ÖN SOL CAM KIRIKO HALAT SETİ  
FRONT WINDOW LEVER CABLE KIT-( LEFT)

AUDİ A4 ÖN SAĞ CAM KIRIKO HALAT SETİ  
FRONT WINDOW LEVER CABLE KIT-( RIGHT)

Code: 1212

2004-12

Code: 1213

04-12

Code: 1214



L



R



YENİ CADY ÖN CAM KIRIKO MAKARASI SOL  
FRONT WINDOW LEVER BOBIN -( LEFT)

YENİ CADY ÖN CAM KIRIKO MAKARASI SAĞ  
FRONT WINDOW LEVER BOBIN -( RIGHT)

Empty text placeholder

Code: 1215

Code:1216

Code:1217



R1

RENAULT GROUP

alp

Code: 400

98-08



77 01 692 458

L

KANGOO ÖN TAMPON DAVLUMBAZI  
FRONT BUMPER PADDLE -R 548

Code: 401

98-08



77 01 692 459

R

KANGOO ÖN TAMPON DAVLUMBAZI  
FRONT BUMPER PADDLE -R 549

Code: 402

98-08



82 01 156 691

L

KANGOO ÖN TEKER DAVLUMBAZI  
FRONT WHEEL PADDLE -R 691

Code: 403

98-08



82 01 156 693

R

KANGOO ÖN TEKER DAVLUMBAZI  
FRONT WHEEL PADDLE -R 693

Code: 404

98-08



77 01 694 459

L

KANGOO ARKA TAMPON DAVLUMBAZI  
BACK BUMPER PADDLE -R 459

Code: 405

98-08



77 01 694 460

R

KANGOO ARKA TAMPON DAVLUMBAZI  
BACK BUMPER PADDLE -R 460

Code: 406

96-03



77 01 422 084

L

LAGUNA 1 ÖNÜN ARKASI DAVLUMBAZ  
BACK OF FRONT PADDLE -R 084

Code: 407

96-03



77 01 422 085

R

LAGUNA 1 ÖNÜN ARKASI DAVLUMBAZ  
BACK OF FRONT PADDLE -R 085

Code: 408

96-03



77 00 844 581

L

LAGUNA 1 ÖN TAMPON DAVLUMBAZI  
FRONT BUMPER PADDLE -R 581

Code: 409

96-03



77 00 844 582

R

LAGUNA 1 ÖN TAMPON DAVLUMBAZI  
FRONT BUMPER PADDLE -R 582

Code: 410

96-03



77 00 818 611

L

LAGUNA 1 ÖN TEKER DAVLUMBAZI  
FRONT WHEEL PADDLE -R 611

Code: 411

96-03



77 00 818 612

R

LAGUNA 1 ÖN TEKER DAVLUMBAZI  
FRONT WHEEL PADDLE -R 612

Code: 412

96-03

77 00 824 153



L

LAGUNA 1 ÖN TAMPON DAVLUMBAZI  
FRONT BUMPER PADDLE -R 153

Code: 413

96-03

77 00 824 156



R

LAGUNA 1 ÖN TAMPON DAVLUMBAZI  
FRONT BUMPER PADDLE -R 154

Code: 414

97-02

77 00 413 202



L

MEGANE 1 ÖN TAMPON DAVLUMBAZI  
FRONT BUMPER PADDLE -R 202

Code: 415

97-02

77 00 413 203



R

MEGANE 1 ÖN TAMPON DAVLUMBAZI  
FRONT BUMPER PADDLE -R 203

Code: 416

98-06

77 00 433 130



L

CLIO 2 TAMPON DAVLUMBAZI  
BUMPER PADDLE -R 130

Code: 417

98-06

77 00 433 131



R

CLIO 2 TAMPON DAVLUMBAZI  
BUMPER PADDLE -R 131

Code: 418

98-06

77 00 410 232



L

CLIO 2 ARKA TAMPON DAVLUMBAZI  
BACK BUMPER PADDLE -R 232

Code: 419

98-06

77 00 410 233



R

CLIO 2 ARKA TAMPON DAVLUMBAZI  
BACK BUMPER PADDLE -R 233

Code: 420

98-06

77 00 834 128



L

CLIO 2 ÖN TEKER DAVLUMBAZI  
FRONT WHEEL PADDLE -R 128

Code: 421

98-06

77 00 834 129



R

CLIO 2 ÖN TEKER DAVLUMBAZI  
FRONT WHEEL PADDLE -R 129

Code: 422

93-98

77 01 761 602



L

EXPRESS ÖN TEKER DAVLUMBAZI  
FRONT WHEEL PADDLE -R 602

Code: 423

93-98

77 01 761 603



R

EXPRESS ÖN TEKER DAVLUMBAZI  
FRONT WHEEL PADDLE -R 603

Code: 424

97-03



Universal

R L

MEGANE 1 ÖN CAM SIKIŞTIRMA -RM01  
FRONT WINDOW COMPRESSION

Code: 425

97-03



L

MEGANE 1 ÖN CAM PLASTIĞI  
FRONT WINDOW PLASTIC - RM01-L

Code: 426

97-03



R

MEGANE 1 ÖN CAM PLASTIĞI  
FRONT WINDOW PLASTIC - RM01-R

Code: 427

97-03



L

MEGANE SCENIC ÖN CAM PLASTIĞI  
FRONT WINDOW PLASTIC - RM04 -L

Code: 428

97-03



R

MEGANE SCENIC ÖN CAM PLASTIĞI  
FRONT WINDOW PLASTIC - RM04 -R

Code: 429

03-09



Universal

R L

MEGANE 2 ÖN CAM PLASTIĞI  
FRONT WINDOW PLASTIC - P007 -L

Code: 430

03-09



Universal

R L

MEGANE 2 ÖN CAM PLASTIĞI  
FRONT WINDOW PLASTIC - P007 -R

Code: 431

03-09



Universal

R L

MEGANE 2 ÖN CAM HALAT SETİ  
FRONT WINDOW CABLE SET- RM09

Code: 432

98-03



Universal

R L

MEGANE 1 ARKA CAM MAKARASI  
BACK WINDOW PULLEY - RM06 -LR

Code: 433

03-09



L

MEGANE 2 ARKA CAM PLASTIĞI  
BACK WINDOW PLASTIC - RM07 -L

Code: 434

03-09



R

MEGANE 2 ARKA CAM PLASTIĞI  
BACK WINDOW PLASTIC - RM07 -R

Code: 435

03-09



L

MEGANE 2 ARKA CAM KRİKO SETİ  
BACK WINDOW LEVER SET-RM07-L-SET

Code: 436

03-09

Code: 437

98-06

Code: 438

97-02



R



Universal

R

L



L

MEGANE 2 ARKA CAM KRİKO SETİ  
BACK WINDOW LEVER SET- RM07 R-SET

CLIO 2 ÖN CAM MAKARASI  
WINDOW LEVER PULLEY -RC03 -LR

MEGANE 1 ÖN CAM KRİKO SETİ  
FRONT WINDOW LEVER SET -RM03-L SET

Code: 439

97-02

Code: 440


97-02

Code: 441

97-02



R

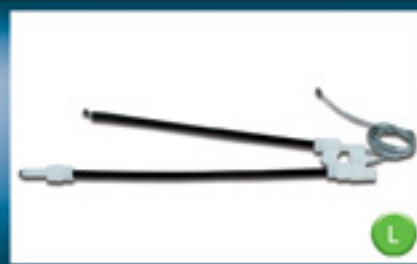

L



R

MEGANE 1 ÖN CAM KRİKO SETİ  
FRONT WINDOW LEVER SET-RM03-R SET

MEGANE 1 ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE -RM03-L

MEGANE 1 ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE-RM03-R

Code: 442

98-06

Code: 443

97-03

Code: 444

97-03



Universal

R

L



L



R

CLIO 2 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-RC02

MEGANE 1 ARKA CAM KRİKO PLASTİĞİ  
BACK WINDOW LEVER PLASTIC-RMA01

MEGANE 1 ARKA CAM KRİKO PLASTİĞİ  
BACK WINDOW LEVER PLASTIC-RMA01

Code: 445

97-03

Code: 446

03-09

Code: 447

03-09



Universal

R


L



Universal

R

L

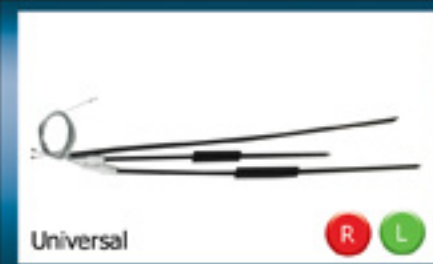

Universal

R

L

MEGANE 1 ÖN CAM KRİKO MAKARASI  
FRONT WINDOW LEVER PULLEY-RM05

CLIO 3 ÖN CAM KRİKO SETİ  
FRONT WINDOW LEVER SET

MEGANE 2 ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE- RM09

Code: 448

98-06



Universal



CLIO CAM KRİKO SIKIŞTIRMA PLASTİĞİ  
WINDOW LEVER COMPRESSION  
PLASTIC- R 456

Code: 449

03-09



Universal



MEGANE 2 ÖN CAM MAKARASI-SOL  
WINDOW LEVER PULEY - R 457

Code: 450

05-07



Universal



CLIO 3 LAGUNA2 ÖN CAM MAKARASI-SOL  
WINDOW LEVER PULEY - R 458

Code: 451

77 00 784 059



R 19 CAM SIKIŞTIRMA PLASTİĞİ  
WINDOW COMPRESSION PLASTIC-R 459

Code: 452

98-01

77 00 842 400



Universal



CLIO 2 ÖN CAM KRİKO HALAT SETİ  
WINDOW LEVER CABLE SET -RC02

Code: 453

01-04

82 00 010 098



Universal



CLIO 2 CAM KRİKO HALAT SETİ-RC04  
WINDOW LEVER CABLE SET - MANUEL

Code: 454

04-06

82 00 169 093



Universal



CLIO 2 CAM KRİKO HALAT SETİ  
WINDOW LEVER CABLE SET -RC05

Code: 455

98-04

77 00 434 707



Universal



CLIO 2 CAM KRİKO HALAT SETİ  
WINDOW LEVER CABLE SET -RC06

Code: 456

97-03



MEGANE ARKA CAM KRİKO HALAT  
BACK WINDOW LEVER CABLE - RMA03

Code: 457

97-03



MEGANE ARKA CAM KRİKO HALAT  
BACK WINDOW LEVER CABLE- RMA03

Code: 458

97-03



MEGANE ARKA CAM HALAT SETİ  
BACK WINDOW LEVER CABLE SET-RMA03

Code: 459

97-03



MEGANE ARKA CAM HALAT SETİ  
BACK WINDOW LEVER CABLE SET-RMA03



Code: 460

98-01

77 00 842 400



Universal



CLIO 2 ÖN CAM KRİKO HALATI - RC02  
FRONT WINDOW LEVER CABLE

Code: 461

02-04

82 00 010 098



Universal



CLIO 2 ÖN CAM KRİKO HALATI - RC04  
FRONT WINDOW LEVER CABLE

Code: 462

98-01

82 00 169 093



Universal



CLIO 2 ÖN CAM KRİKO HALATI - RC05  
FRONT WINDOW LEVER CABLE

Code: 463

98-01

77 00 434 707




Universal



CLIO 2 ÖN CAM KRİKO HALATI - RC06  
FRONT WINDOW LEVER CABLE

Code: 464

03-09

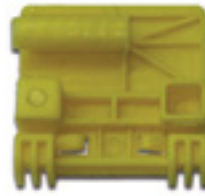

LAGUNA 2-SCENIC 2 ARKA CAM PLASTİĞİ  
BACK WINDOW PLASTIC - RMS01

Code: 465

03-09



LAGUNA 2-SCENIC 2 ARKA CAM PLASTİĞİ  
BACK WINDOW PLASTIC - RMS01

Code: 466

03-09



LAGUNA 2 ÖN CAM PLASTİĞİ  
FRONT WINDOW PLASTIC -R 474

Code: 467

03-09



LAGUNA 2 ÖN CAM PLASTİĞİ  
FRONT WINDOW PLASTIC -R 476

Code: 468

03-09



MODUS ÖN SOL CAM HALAT SETİ  
FRONT WINDOW CABLE SET (LEFT)

Code: 469

03-09



MODUS ÖN SAĞ CAM HALAT SETİ  
FRONT WINDOW CABLE SET (RIGHT)

Code: 470

03-09



Universal



LAGUNA 2 ÖN SOL CAM HALAT SETİ  
FRONT WINDOW CABLE SET (LEFT)

Code: 471

03-09



SCENIC 1 ÖN CAM HALAT SETİ SOL  
FRONT WINDOW CABLE SET (LEFT)

R7

RENAULT GROUP

alp

Code: 472

03-09



SCENIC 2 ÖN CAM HALAT SETİ  
FRONT WINDOW CABLE SET

Code: 473

03-09



LAGUNA 2-SCENIC 2 CAM HALAT SETİ  
WINDOW CABLE SET

Code: 474

03-09



LAGUNA 2-SCENIC 2 CAM HALAT SETİ  
WINDOW CABLE SET

Code: 475

Code: 476

Code: 477

03-09



Universal

CAM SIKIŞTIRMA PLASTİĞİ  
WINDOW COMPRESSION PLASTIC



Universal

CAM SIKIŞTIRMA PLASTİĞİ  
WINDOW COMPRESSION PLASTIC



SCENIC CAM KIZAK KÖŞE PLASTİĞİ  
WINDOW SKID CORNER PLASTIC

Code: 478

03-09

Code: 479

03-09

Code: 480

03-09



SCENIC CAM KIZAK KÖŞE PLASTİĞİ  
WINDOW SKID CORNER PLASTIC



MEGANE 1 CAM KIZAK KÖŞE PLASTİĞİ  
WINDOW SKID CORNER PLASTIC



MEGANE 1 CAM KIZAK KÖŞE PLASTİĞİ  
WINDOW SKID CORNER PLASTIC

Code: 481-K-S

Code: 482-482-S

Code: 483



481-K

481-S

MEGANE 2 LAGUNA 2 KAPI KOLU  
PARÇASI -GRİ BOYALI - SİYAH  
DOOR HANDLE PART (GREY)



482

482-S

CLIO 3 KAPI KOLU PARÇASI  
KAPLAMALI - SİYAH  
DOOR HANDLE PART (BLACK)



MEGANE 2-CLIO 3 JANT KAPAK  
ANAHTAR TAKIMI LAGUNA 2  
RIM COVER KEY SET

Code: 484



CLIO-KANGO DEPO ŞAMANDIRA KAPAĞI  
TANK BUOY

Code: 485



MASTER JANT GÖBEK KAPAĞI  
RIM CORE COVER

Code: 486

03-09



LAGUNA 2 ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

Code: 487

03-09



SCENIC 1 ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

Code: 488



LOGAN ÖN CAM KRİKO PLASTIĞI  
WINDOW LEVER PLASTIC

Code: 489



LOGAN ÖN CAM KRİKO PLASTIĞI  
WINDOW LEVER PLASTIC

Code: 490



LOGAN ÖN CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SET

Code: 491



LOGAN ÖN CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SET

Code: 492



LOGAN ÖN CAM KRİKO MAKARASI  
FRONT WINDOW LEVER PULLEY

Code: 493



LOGAN ÖN CAM KRİKO MAKARASI  
FRONT WINDOW LEVER PULLEY

Code: 494



LOGAN ÖN ÇAMURLUK DAVLUMBAZI  
FRONT MUDGUARD PADDLE

Code: 495



LOGAN ÖN ÇAMURLUK DAVLUMBAZI  
FRONT MUDGUARD PADDLE

Code: 496

02-09

Code: 497

02-09

Code: 498

2002-2009



R L

MEGANE 2 CABRIO ARKA CAM KRİKO PLASTİK  
REAR WINDOW LEVER MECHANISM PLASTIC



L

MEGANE 2 CABRIO ARKA CAM KRİKO SETİ-SOL  
REAR WINDOW LEVER MECHANISM CABLE-(R)



Universal

R

MEGANE 2 CABRIO ARKA CAM KRİKO SETİ-SAĞ  
REAR WINDOW LEVER MECHANISM CABLE(R)

Code: 499

03-09

Code: 932

98-06

Code: 933


1998-2006



Universal


R L

CLİO 3 ÖN CAM KRİKO PLASTİĞİ-SOL-SAĞ  
FRONT WINDOW LEVER PLASTIC (LR)

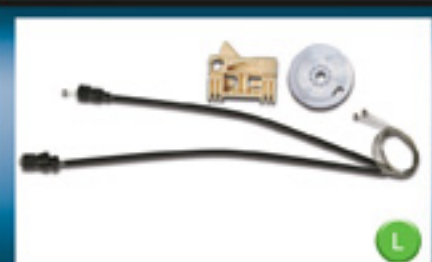

L

CLİO 2 COUPE SOL CAM KRİKO SETİ  
WINDOW LEVER CABLE KIT(LEFT)

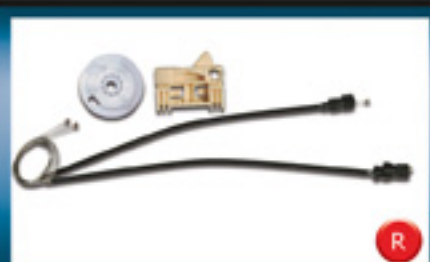

R

CLİO 2 COUPE SAĞ CAM KRİKO SETİ  
WINDOW LEVER CABLE KIT(RIGHT)

Code: 934

Code: 935

Code: 936



L

MEGANE 1 COUPE CAM KRİKO HALAT SET-SOL  
FRONT WINDOW LEVER CABLE SET (LEFT)



R

MEGANE 1 COUPE CAM KRİKO HALAT SET-SAĞ  
FRONT WINDOW LEVER CABLE SET (RIGHT)



R

MEGANE 2 CAM KRİKO MAKARASI-SAĞ  
WINDOW LEVER PULLEY (RIGHT)

Code: 937

Code: 938

Code: 939



R

MEGANE 2 ÖN CAM KRİKO MAKARASI-SAĞ  
FRONT WINDOW LEVER PULLEY(RIGHT)



L

MEGANE SCANIC KÖŞE PLASTİĞİ-SOL  
WINDOW LEVER MECHANISM PLASTIC (L)



R

MEGANE SCANIC KÖŞE PLASTİĞİ-SAĞ  
WINDOW LEVER MECHANISM PLASTIC (R)

Code: 940

02-09

Code: 941

98-06

Code: 942

2003-2009



CLİO 2 SUNROOF TAMİR SETİ  
CLIO II -SUNROOF REPAIR SET



MEGANE 1 SUNROOF TAMİR SETİ  
MEGANE I SUNROOF REPAIR SET



MEGANE SCANIC SUNROOF TAMİR SETİ  
MEGANE SCANIC SUNROOF REPAIR SET

Code: 943

03-09

Code: 944

98-06

Code: 945

1998-2006



VELSATİS ÖN SOL KRİKO SETİ  
FRONT WINDOW LEVER CABLE SET (L)



VELSATİS ÖN SAĞ KRİKO SETİ  
FRONT WINDOW LEVER CABLE SET (R)



VELSATİS ARKA SOL KRİKO SETİ  
REAR WINDOW LEVER CABLE SET (L)

Code: 946

Code: 947

Code: 948



VELSATİS ARKA SAĞ KRİKO SETİ  
REAR WINDOW LEVER CABLE SET (R)



ESPACE ARKA SOL KRİKO SETİ  
REAR WINDOW LEVER CABLE SET (L)



ESPACE ARKA SAĞ KRİKO SETİ  
REAR WINDOW LEVER CABLE SET (R)

Code: 949

Code: 950

Code: 951



MEGANE SCANIC 2 ÖN SOL CAM KRİKO SETİ  
WINDOW LEVER MECHANISM CABLE KIT (L)



MEGANE SCANIC 2 ÖN SAĞ CAM KRİKO SETİ  
WINDOW LEVER MECHANISM CABLE KIT (R)



LAGUNA 2 ÖN SAĞ CAM HALAT SETİ  
WINDOW LEVER MECHANISM KIT (RIGHT)

F1

ALFA ROMEO - FIAT GROUP

alp

Code: 500

97-01



M

ALFA ROMEO ALT KARTER MUHAFAZA  
ESKİ KASA - A001  
BOTTOM CARTER SHIELD (OLD MODEL)

Code: 501

02-06



M

ALFA ROMEO ALT KARTER MUHAFAZA  
YENİ KASA - A002  
BOTTOM CARTER SHIELD (NEW MODEL)

Code: 502

98-07



M

DOBLO ALT KARTER MUHAFAZA  
ESKİ KASA - D001  
BOTTOM CARTER SHIELD (OLD MODEL)

Code: 503

88-96



Universal

R L

TOFAŞ 131 OTOMATİK CAM MAKARASI  
AUTOMATIC WINDOW PULLEY

Code: 504

03-11



Universal

R L

FIAT LINEA ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

Code: 505

2003-2009




Universal

R L

PUNTO ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

Code: 506

2003-10

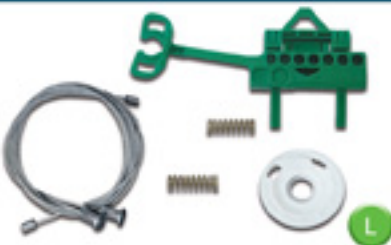

L

LINEA ÖN CAM KRİKO SETİ  
FRONT WINDOW LEVER SET

Code: 507

03-10



R

LINEA ÖN CAM KRİKO SETİ  
FRONT WINDOW LEVER SET

Code: 508

98-06




Universal

R L

DOBLO CAM KRİKO MAKARA DIŞLISI  
WINDOW LEVER PULLEY GEAR

Code: 509-510

98-08

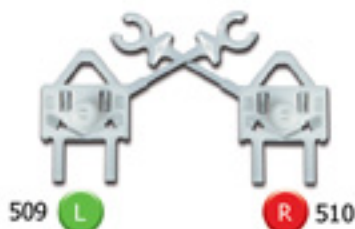

509

L

R

510

DOBLO ÖN CAM KRİKO PLASTİKLERİ  
FRONT WINDOW LEVER PLASTICS

Code: 511

98-08



L

SIENA - PALIO ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC

Code: 512

98-08



R

SIENA - PALIO ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC

Code: 513

98-06

Code: 514

98-06

Code: 515

98-06



Universal

R L



L



R

DOBLO CAM KRİKO HALATI  
WINDOW LEVER CABLE - D003

SIENA - PALIO CAM KRİKO HALAT SETİ  
WINDOW LEVER CABLE SET - D009

SIENA - PALIO CAM KRİKO HALAT SETİ  
WINDOW LEVER CABLE SET - D009

Code: 516

98-2010

Code: 517

98-06

Code: 518

98-2010



L



Universal

R L



R

DOBLO SIENA CAM KRİKO MAKARASI  
WINDOW LEVER PULLEY (L) - D004

SIENA - PALIO CAM KRİKO HALATI  
WINDOW LEVER CABLE - D007

DOBLO SIENA CAM KRİKO MAKARASI-SOL  
WINDOW LEVER PULLEY - (R) D008

Code: 519

98-06

Code: 520

98-06

Code: 521



L



R



L

DOBLO CAM KRİKO SETİ  
FRONT WINDOW LEVER SET - D005

DOBLO CAM KRİKO SETİ  
FRONT WINDOW LEVER SET - D005

ALBEA - PUNTO CAM KIZAK PLASTIĞI  
WINDOW SKID PLASTIC

Code: 522

Code: 523

Code: 524



R



L



R

ALBEA - PUNTO CAM KIZAK PLASTIĞI  
WINDOW SKID PLASTIC

ALBEA - PUNTO CAM MOTOR KAPAĞI  
WINDOW MOTOR COVER

ALBEA - PUNTO CAM MOTOR KAPAĞI  
WINDOW MOTOR COVER

Code: 525



L

ALBEA- PUNTO ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC - D012

Code: 526



R

ALBEA- PUNTO CAM ÖN KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC - D012

Code: 527



L

ALBEA- PUNTO ARKA CAM KRİKO PLASTİĞİ  
BACK WINDOW LEVER PLASTIC - D013

Code: 528



R

ALBEA- PUNTO ARKA CAM KRİKO PLASTİĞİ  
BACK WINDOW LEVER PLASTIC - D013

Code: 529



manuel

L

ALBEA- PUNTO ÖN CAM KRİKO SETİ  
FRONT WINDOW LEVER SET

Code: 530



manuel

R

ALBEA- PUNTO ÖN CAM KRİKO SETİ  
FRONT WINDOW LEVER SET

Code: 531



L

DOBLO ÖN CAM KRİKO KÖŞE PLASTİĞİ  
FRONT WINDOW LEVER CORNER PLASTIC

Code: 532



R

DOBLO ÖN CAM KRİKO KÖŞE PLASTİĞİ  
FRONT WINDOW LEVER CORNER PLASTIC

Code: 533



Universal

R

L

DOBLO ÖN CAM KRİKO KÖŞE MAKARA  
FRONT WINDOW LEVER CORNER PULLEY

Code: 534



Universal

R

L

PUNTO CAM KRİKO SIKIŞTIRMA PLASTİĞİ  
WINDOW LEVER COMPRESSION PLASTIC

Code: 535

DOBLO ARKA SİLECEK DİŞLİSİ  
GEAR FOR DOBLO REAR WIPER

Code: 536

DOBLO CAM DENGE PLASTİĞİ  
WINDOW LEVER PLASTIC



Code: 537

98-2006

Code: 538

98-06

Code: 539

2006-2010



L

DOBLO CAM KRİKO KÖŞE PLASTİĞİ-SOL  
FRONT WINDOW LEVER PLASTIC -LEFT



R

DOBLO CAM KRİKO KÖŞE PLASTİĞİ-SAĞ  
FRONT WINDOW LEVER PLASTIC -RIGHT



L

DOBLO CAM KRİKO KÖŞE PLASTİĞİ-SOL  
FRONT WINDOW LEVER PLASTIC -LEFT


Code: 540

2006-2010

Code: 541

98-10

Code: 542

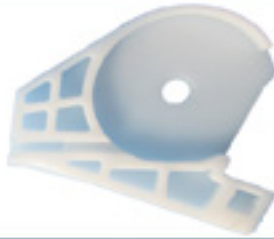

R

DOBLO CAM KRİKO KÖŞE PLASTİĞİ-SAĞ  
FRONT WINDOW LEVER PLASTIC -RIGHT



R

L

DOBLO KIZAK MAKARASI CAM KRİKO SETİ  
FRONT WINDOW LEVER BOBIN(LR)



L

R

DOBLO KIZAK MAKARA PİM  
MOTOR PULLEY PIN DOBLO

Code: 543

Code: 544

Code: 545



TEMPRA CAM KRİKO SIKIŞTIRMA PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC -(LR)



TEMPRA DEBRİAJ-FREN PEDAL LASTİĞİ  
RUBBER FOOT PEDAL

Code: 546

Code:547

Code:548

**Code: 600**

98-04



Universal


**ASTRA G ARKA CAM KRİKO PLASTİĞİ**  
**BACK WINDOW LEVER PLASTIC -OM01**
**Code: 601**

98-04



Universal


**ASTRA G ARKA CAM KRİKO HALATI**  
**BACK WINDOW LEVER CABLE - OM02**
**Code: 602**

98-04



Universal


**UNİVERSAL ÖN CAM KRİKO PLASTİĞİ**  
**FRONT WINDOW LEVER PLASTIC-OM03**
**Code: 603**

98-04



Universal


**ASTRA G ARKA CAM KRİKO MAKARASI**  
**BACK WINDOW LEVER PULLEY- OM04**
**Code: 604**

98-04


**MERİVA ÖN CAM KRİKO PLASTİĞİ**  
**FRONT WINDOW LEVER PLASTIC-OM05**
**Code: 605**

98-04


**MERİVA ÖN CAM KRİKO PLASTİĞİ**  
**FRONT WINDOW LEVER PLASTIC-OM05**
**Code: 606**

98-04



Universal


**ASTRA G ARKA CAM KRİKO HALAT SETİ**  
**BACK WINDOW LEVER CABLE SET-OM07**
**Code: 607**

01-08



Universal


**CORSA C TÖN CAM KRİKO PLASTİĞİ**  
**FRONT WINDOW LEVER PLASTIC-OM08**
**Code: 608**

98-04



Universal


**ASTRA G ARKA CAM KRİKO HALAT**  
**SETİ KIRILMAZ - OM07**  
**WINDOW LEVER CABLE SET UNBREAKABLE**
**Code: 609**

**GÜNEŞLİK PLASTİĞİ GRİ - OM013**  
**UNİVERSAL - SUNSHADE PLASTIC**
**Code: 610**

**VECTRA B-JANT ANAHTAR TAKIMI**  
**UNİVERSAL RİM KEY SET**
**Code: 611**

98-04



Universal


**MERİVA ÖN SOL CAM HALAT SETİ**  
**FRONT WINDOW CABLE SET**

Code: 612

98-04



Universal

R

Code: 613

98-04



Universal

R

L

Code: 614

EMNİYETLİ KONTAK ZAMAĞI  
SAFELY IGNITION ZINC

Code: 615

VECTRA - ASTRA G ÖN CAM KRİKO DİŞLİSİ  
FRONT WINDOW LEVER GEAR

Code: 616

BİJON KAPAĞI PLASTİĞİ  
BIJON COVER PLASTIC

Code: 617

DİREKSİYON KORNA PLASTİĞİ  
CORSA C - COMBO SET  
STEERING KLAXON PLASTIC

Code: 618

TANPON CEKİ KAPAĞI SAÇLI  
CORSA C - COMBO  
BUMPER TOWED COVER -WITH SHEET

Code: 619

TANPON CEKİ KAPAĞI SAÇLI  
VECTRA B - ASTRA G  
BUMPER TOWED COVER -WITH SHEET

Code: 620

CORSA C VİTES TAKIM BURCU  
CORSA C GEAR REPAIR SET

Code: 621



L

R

VECTRA B ARKA CAM KRİKO HALAT SETİ  
REAR WINDOW LEVER CABLE SETİ (LR)

Code: 622



L

R

VECTRA B ARKA CAM KRİKO HALATI  
REAR WINDOW LEVER CABLE (LR)

Code: 623

OPEL ÜNİVERSAL KAPUT İZALATÖR KLİPSSİ  
HOOT İZALATÖR KLİPSSİ-UNİVERSAL

Code: 624

98-06



ZAFİRA ARKA CAM SOL HALAT SETİ  
FRONT WINDOW CABLE SET(LEFT)

Code: 625

98-06



ZAFİRA ARKA CAM SAĞ HALAT SETİ  
FRONT WINDOW CABLE SET(RIGHT)

Code: 626



CORSA D -ASTRA- CAM KRİKO PLASTİĞİ-SOL  
WINDOW LEVER MECHANISM PLASTIC(LEFT)

Code: 627



CORSA D -ASTRA- CAM KRİKO PLASTİĞİ-SAĞ  
WINDOW LEVER MECHANISM PLASTIC(RIGHT)

Code: 628



CORSA D ÖN CAM KRİKO SETİ-SOL  
WINDOW LEVER MECHANISM SET (LEFT)

Code: 629



CORSA D ÖN CAM KRİKO SETİ-SAĞ  
WINDOW LEVER MECHANISM SET (RIGHT)

Code: 630



ASTRA F ÖN CAM KRİKO SETİ-SOL  
FRONT WINDOW LEVER MECHANISM SET (L)

Code: 631



ASTRA F ÖN CAM KRİKO SETİ-SAĞ  
FRONT WINDOW LEVER MECHANISM SET (R)

Code: 632



CORSA D -ASTRA F- CAM KRİKO MAKARA-SOL  
WINDOW LEVER MECHANISM BOBIN(LEFT)

Code: 633



CORSA D -ASTRA- CAM KRİKO MAKARA-SAĞ  
WINDOW LEVER MECHANISM BOBIN(R)

Code: 634



ASTRA G-VECTRA B ARKA CAM HALAT SEÇMANI  
REAR WINDOW LEVER CABLE SEÇMAN (LR)

Code: 635



OPEL ASTRA G-VECTRA B-ZAFİRA PLASTİK  
REAR WINDOW LEVER MECHANISM PLASTIC

Code: 700

98-03

Code: 701

98-03

Code: 702

98-03



2M 511 611 4AB

L



2M 511 611 5AB

R



256X161 14AB

L

FOCUS ÖN DAVLUMBAZ PLASTIĞI  
FRONT PADDLE PLASTIC - FF011

FOCUS ÖN DAVLUMBAZ PLASTIĞI  
FRONT PADDLE PLASTIC- FF011

FIESTA ÖN DAVLUMBAZ PLASTIĞI  
FRONT PADDLE PLASTIC - FS09

Code: 703

98-03

Code: 704

Code: 705



256X161 15AB

R



L



R

FIESTA ÖN DAVLUMBAZ PLASTIĞI  
FRONT PADDLE PLASTIC - FS09

CONNECT CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

CONNECT CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

Code: 706

98-07

Code: 707

98-04

Code: 708

98-04



FIESTA KAPUT AÇMA ÇUBUĞU  
HOOD-OPEN ROD - FF013



L



M

FOCUS ÖN CAM KRİKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC- FF01

FOCUS ÖN CAM KRİKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC- FF01

Code: 709

98-04

Code: 710

98-04

Code: 711

98-04



R



L



R

FOCUS ÖN CAM KRİKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC-FF01

FOCUS ARKA CAM KRİKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC FFA01

FOCUS ARKA CAM KRİKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC FFA01

Code: 712

98-03



FOCUS ARKA CAM KRİKO SETİ - FA02  
BACK WINDOW LEVER SET

Code: 713

98-03



FOCUS ARKA CAM KRİKO SETİ - FA02  
BACK WINDOW LEVER SET

Code: 714

98-03



FOCUS CAM KRİKO MAKARASI SOL  
WINDOW LEVER PULLEY (LEFT)

Code: 715

98-03



FOCUS CAM SIKIŞTIRMA PLASTİĞİ  
WINDOW COMPRESSION PLASTIC

Code: 716



TRANSIT CAM KRİKO DENGE PLASTİĞİ  
WINDOW LEVER BALANCE PLASTIC

Code: 717

98-03



FOCUS CAM KRİKO MAKARASI PİMLİ  
WINDOW LEVER PULLEY-PINNED

Code: 718

98-03



FOCUS ÖNCAM KRİKO HALATI - FF02  
FRONT WINDOW LEVER CABLE

Code: 719

98-03



FOCUS ÖN CAM KRİKO HALAT - FF02  
FRONT WINDOW LEVER CABLE SET

Code: 720

98-03



FOCUS ÖN CAM KRİKO HALAT - FF02  
FRONT WINDOW LEVER CABLE SET

Code: 721

98-03



FİESTA ÖN CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SET

Code: 722



RANGER FARAYAR KLİPSSİ-VİDALI  
HEADLIGHT SETTING CLIPS NUM 1

Code: 723



RANGER FARAYAR KLİPSSİ-VİDALI  
HEADLIGHT SETTING CLIPS NUM 1

Code: 724

98-03



Universal



Code: 725



Universal



Code: 726

98-03



Universal



FIESTA CAM KRİKO MAKARASI  
WINDOW LEVER PULLEY

ACCOR CAM KRİKO MAKARASI  
WINDOW LEVER PULLEY

MONDEO CAM KRİKO MAKARASI-SOL  
WINDOW LEVER PULLEY(LEFT)

Code: 727

03-09



Universal



Code: 728

98-03



Universal



Code: 729



Universal



FOCUS CAM KRİKO HALATI Y.MODEL  
WINDOW LEVER CABLE (NEW MODEL)

FOCUS ARKA CAM KRİKO HALATI  
BACK WINDOW LEVER CABLE

FORD ACCOR CAM KRİKO HALATI  
WINDOW LEVER CABLE

Code: 730



Code: 731



Code: 732



FORD CARGO CAM KRİKO PLASTIĞI  
WINDOW LEVER PLASTIC

FORD CARGO CAM KRİKO PLASTIĞI  
WINDOW LEVER PLASTIC

FORD CARGO CAM KRİKO HALAT SETİ  
WINDOW LEVER CABLE SOL/LEFT- SET

Code: 733



Code: 734



NUM 1



Code: 735



NUM 2



FORD CARGO CAM KRİKO HALAT SETİ  
WINDOW LEVER CABLE SAĞ/RIGHTSET

FIESTA ÖN CAM KRİKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC

FIESTA ÖN CAM KRİKO PLASTIĞI  
FRONT WINDOW LEVER PLASTIC

Code: 736

03-09



L

 CONNET CAM KRİKO PLASTİĞİ  
 WINDOW LEVER PLASTIC-LEFT/SOL

Code: 737

03-09



R

 CONNET CAM KRİKO PLASTİĞİ  
 WINDOW LEVER PLASTIC-RIGHT/SAĞ

Code: 738

94-98



L

 ESCORD CAM KRİKO PLASTİĞİ-SOL  
 WINDOW LEVER PLASTIC/LEFT

Code: 739

94-98




R

 ESCORD CAM KRİKO PLASTİĞİ-SAĞ  
 WINDOW LEVER PLASTIC/ RIGHT

Code: 740

98-03

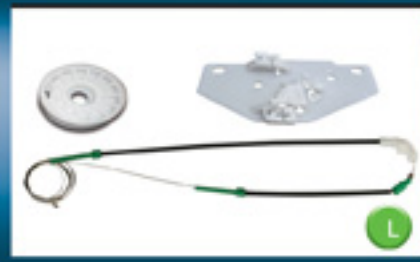

L

 CONNET ÖN SOL CAM KRİKO HALAT  
 FRONT WINDOW LEVER CABLE SET

Code: 741



R

 CONNET ÖN SAĞ CAM KRİKO HALAT  
 FRONT WINDOW LEVER CABLE SET

Code: 742



L

R

 FORD CONNET MAKARA SOL/SAĞ  
 WINDOW LEVER PLASTIC BOBİN

Code: 743


 FORD KAPI DÖŞEME KLİPSSİ  
 TRIM CLIPS UNIVERSAL

Code: 744



UNIVERSAL DÖŞEME KLİPSSİ

Code: 745


 FORD CONNET TAVAN KLİPSSİ-GRİ  
 FORD CONNET TRIM KLİPSSİ

Code: 746


 FORD TRANSİT DÖŞEME KLİPSSİ  
 FORD TRANSİT TRIM KLİPSSİ

Code: 747


 FORD CONNET CİTA KLİPSSİ  
 FORD CONNET TRIM KLİPSSİ



Code: 765

96-2006

Code: 766

96-06

Code: 767

94-98



L



R



L

GALAXY ÖN SOL CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SETI-LEFT

GALAXY ÖN SAĞ CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SETI-RIGHT

FOCUS COUPE ÖN SOL CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SETI-LEFT

Code: 768

98-2003

Code: 769

2000-07

Code: 770

2000-07



R



L



R

FOCUS COUPE ÖN SAĞ CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SETI-RIGHT

MONDEO ÖN SOL CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SETI(LEFT)

MONDEO ÖN SAĞ CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SETI(RIGHT)

Code: 771

2003-09

Code: 772

Code: 773



L



R



FORD FOCUS 2 ÖN SOL KRİKO CAM SETİ  
FRONT WINDOW LEVER CABLE SET(LEFT)

FORD FOCUS 2 ÖN SAĞ KRİKO CAM SETİ  
FRONT WINDOW LEVER CABLE SET(RIGHT)

FOCUS CAM KRİKO MAKARASI-SAĞ  
WINDOW LEVER MECHANISM BOBIN(LEFT)

Code: 774

Code: 775

Code: 776



Code: 800

01-08



Universal

307 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC

Code: 801

01-08



Universal

307 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC

Code: 802

98-08



Universal

PARTNER-BERLINGO ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-P001-L

Code: 803

98-08



Universal

PARTNER-BERLINGO ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-P001-R

Code: 804

98-06



Universal

206-C2-C3 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-P007-L

Code: 805

98-06



Universal

206-C2-C3 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-P007-R

Code: 806

Code: 807

Code: 808

106 - SAXO ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-P106106 - SAXO ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-P106

Universal

PARTNER ÖN CAM KRİKO MAKARA  
FRONT WINDOW LEVER PULLEY-BERLINGO

Code: 809

93-98

306 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-P306

Code: 810

93-98

306 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC-P306

Code: 811

98-08

PARTNET BERLINGO ORTA KAPI KOL PİMİ  
CENTER DOOR HANDLE PIN - BERLINGO

Code: 812



Universal



Code: 813

98-06



Universal



Code: 814

98-06



Universal



PEU 306 - PEYCAN ÖN CAM KRİKO PLS  
FRONT WINDOW LEVER PLASTIC

PARTNER ÖN CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SET

PEU 206 ÖN CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SET

Code: 815

98-05



Universal



Code: 816



Universal



Code: 817



PEU 206 ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

PEU 206 ÖN CAM KRİKO MAKARA  
FRONT WINDOW LEVER PULLEY

PEU 406 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC NUM 1

Code: 818



Code: 819



Code: 820



PEU 406 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC NUM 2

CIT XANTIA ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC

CIT XANTIA ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC

Code: 821



Universal



Code: 822



Universal



Code: 823



Universal



PEU 307 CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE


PEUGEOT CAM KRİKO KIZAK MAKARASI  
FRONT WINDOW LEVER PLASTIC BOBIN

PEU 307 CAM SIKIŞTIRMA PLASTİĞİ  
WINDOW COMPRESSION PLASTIC

Code: 824

PEU 406 ARKA CAM KRİKO HALAT SETİ  
REAR WINDOW LEVER CABLE SET

Code: 825

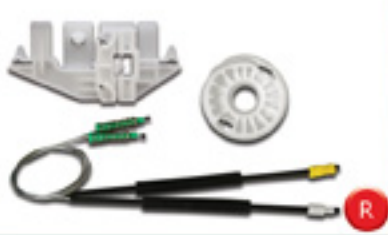PEU 406 ARKA CAM KRİKO HALAT SETİ  
REAR WINDOW LEVER CABLE SET

Code: 826

CIT C2-C3 ÖN CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SET

Code: 827

CIT C2-C3 ARKA CAM KRİKO SETİ  
REAR WINDOW LEVER CABLE SET

Code: 828

CIT C2-C3 ARKA CAM KRİKO SETİ  
REAR WINDOW LEVER CABLE SET

Code: 829

PEUGEOT 307 ÖN MAKARA  
WINDOW LEVER PULLEY

Code: 830

PEUGEOT 307 ÖN CAM HALAT SETİ  
WINDOW LEVER MECHANISM CIT

Code: 831

CITROEN X SARA ÖN CAM KRİKO HALATI  
FRONT WINDOW LEVER CABLE

Code: 832

CITROEN X SARA ÖN SOL MAKARA  
WINDOW LEVER PULLEY(LEFT)

Code: 833

CITROEN X SARA ÖN SAĞ MAKARA  
WINDOW LEVER PULLEY(RIGHT)

Code: 834

CITROEN X SARA ÖN SOL MAKARA  
WINDOW LEVER PLASTIC (LEFT)

Code: 835

CITROEN X SARA ÖN SAĞ MAKARA  
WINDOW LEVER PLASTIC (RIGHT)

Code: 836



L

CITROEN X SARA ÖN SOL CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SET-LEFT

Code: 837



R

CITROEN X SARA ÖN SAĞ CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SET-RIGHT

Code: 838



R L

PEU 406 CAM KRİKO MOTOR DİŞLİSİ  
FRONT WINDOW LEVER ENGINE PULLEY

Code: 839

98-2002



L

PEU-306 COUPE ÖN SOL CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SET-LEFT


Code: 840



R

PEU-306 COUPE ÖN SAĞ CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SET-RIGHT

Code: 841

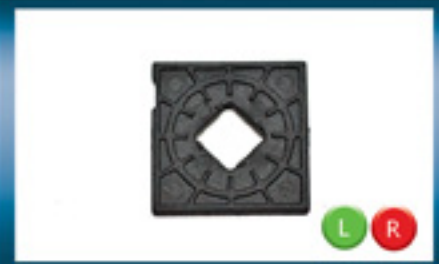

L R

PEU-106 -ÖN CAM KRİKO SIKIŞTIRMA PLAS-  
FRONT WINDOW LEVER PLASTIC (LR)

Code: 842

2000-10



L

R

PEUGEOT 607 ÖN SOL SAĞ CAM HALATI  
FRONT WINDOW LEVER CABLE (LR)

Code: 843

2000-10



L

PEUGEOT 607 ÖN SOL CAM SETİ  
FRONT WINDOW LEVER SET (LEFT)

Code: 844

2000-10



R

PEUGEOT 607 ÖN SAĞ CAM SETİ  
FRONT WINDOW LEVER SET (RIGHT)

Code: 845

2000-10



L

R

PEUGEOT 607 SOL SAĞ CAM MAKARA  
WINDOW LEVER PULLEY(LEFT-RIGHT)

Code: 846

2000-10



L

PEU- 607 ÖN SOL CAM PLASTİK SETİ  
FRONT WINDOW LEVER PLASTIC (LEFT)

Code: 847

2000-10



R

PEU- 607 ÖN SAĞ CAM PLASTİK SETİ  
FRONT WINDOW LEVER PLASTIC (RIGHT)

Code: 848

2000-10



PEU-607 ÖN CAM KRİKO PLASTİK SETİ  
FRONT WINDOW LEVER PLASTIC SET-(L-R)

Code: 849

2000-10



PEUGEOT 607 ÖN SOL CAM SETİ  
FRONT WINDOW LEVER SET (LEFT)

Code: 850


2000-10



PEUGEOT 607 ÖN SAĞ CAM SETİ  
FRONT WINDOW LEVER SET (RIGHT)

Code: 851

2000-10

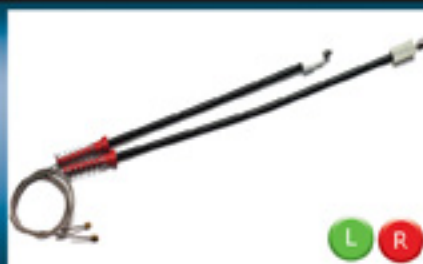

PEU-607 ARKA CAM KRİKO HALATI-SOL-SAĞ  
REAR WINDOW LEVER CABLE (LEFT-RIGHT)

Code: 852

2000-10



PEU-607 ARKA SOL CAM KRİKO SETİ  
REAR WINDOW LEVER CABLE SET-LEFT

Code: 853



PEU-607 ARKA SAĞ CAM KRİKO SETİ  
REAR WINDOW LEVER CABLE SET-RIGHT

Code: 854

2006-10



CITROEN C5 ÖN CAM KRİKO PLASTİK SETİ  
FRONT WINDOW LEVER PLASTIC SET-(L-R)

Code: 855

2006-10



CITROEN C5 ÖN SOL CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SET-(LEFT)

Code: 856

2006-10



CITROEN C5 ÖN SAĞ CAM KRİKO HALAT SETİ  
FRONT WINDOW LEVER CABLE SET-(RIGHT)

Code: 857

Code: 858

Code: 859



**Code: 1000**


Universal


**Code: 1001**


Universal


**Code: 1002**


Universal


 210-140 KASA ARKA CAM KRİKO PLASTİĞİ  
 BACK WINDOW LEVER PLASTIC

 210-140 KASA ARKA CAM KRİKO HALATI  
 BACK WINDOW LEVER CABLE

 210-140 KASA ARKA CAM KRİKO MAKARASI  
 BACK WINDOW LEVER PULLEY

**Code: 1003**


Universal


**Code: 1004**


Universal


**Code: 1005**


Universal


 210-140 KASA CAM KRİKO KIZAK  
 ÜST MAKARASI - WINDOW LEVER SKID

 140 KASA ARKA CAM KRİKO HALATI  
 BACK WINDOW LEVER CABLE

 210 KASA CAM KRİKO HALAT SETİ  
 WINDOW LEVER CABLE SET

**Code: 1006**


Universal


**Code: 1007**

**Code: 1008**

 140 KASA CAM KRİKO HALAT SETİ  
 WINDOW LEVER CABLE SET

 VITO CAM KRİKO PLASTİĞİ M014-L  
 WINDOW LEVER PLASTIC

 VITO CAM KRİKO PLASTİĞİ M014-R  
 WINDOW LEVER PLASTIC

**Code: 1009**

**Code: 1010**


Universal


**Code: 1011**


M009

Universal


 VITO ÖN CAM KRİKO MAKARASI M015  
 FRONT WINDOW LEVER PULLEY

 210 - 140 KASA ÖN CAM KRİKO PLASTİĞİ  
 FRONT WINDOW LEVER PLASTIC-M008

 UNIVERSAL ÖN CAM KRİKO PLASTİĞİ  
 FRONT WINDOW LEVER PLASTIC

Code: 1012



VITO ÖN CAM KIRIK HALAT SETİ  
FRONT WINDOW LEVER CABLE SET

Code: 1013



VITO ÖN CAM KIRIK HALAT SETİ  
FRONT WINDOW LEVER CABLE SET

Code: 1014



Universal

VITO ÖN CAM KIRIK HALAT  
FRONT WINDOW LEVER CABLE

Code: 1015



VITO ÖN CAM KIRIK MAKARASI-M015  
FRONT WINDOW LEVER PULLEY

Code: 1016



Universal

ACCOR CAM KIRIK MAKARASI  
WINDOW LEVER PULLEY - ATEGO

Code: 1017



ACCOR ÖN CAM KIRIK HALATI  
FRONT WINDOW LEVER CABLE-ATEGO

Code: 1018



ACCOR ÖN CAM KIRIK HALATI  
FRONT WINDOW LEVER CABLE-ATEGO

Code: 1019



ACCOR ÖN CAM KIRIK HALATI SETİ  
FRONT WINDOW LEVER CABLE SET-ATEGO

Code: 1020



ACCOR ÖN CAM KIRIK HALATI SETİ  
FRONT WINDOW LEVER CABLE SET-ATEGO

Code: 1021



Universal

E 320 CAM DENGE PLASTIĞI PERÇINLI  
WINDOW BALANCE PLASTIC

Code: 1022



Universal

E 320 CAM DENGE PLASTIĞI  
WINDOW BALANCE PLASTIC

Code: 1023



Universal

210 KASA CAM KIRIK HALAT SETİ  
WINDOW LEVER CABLE SET



Code: 1024



PERDE DİŞLİSİ MRC 124-210-OPEL-BMW

Code: 1025



MRC 124- 210 CASE SCREEN GEAR

Code: 1206



MRC 124- KASA AYNA KONTROL PİMİ

Code: 1027



MRC 124- KASA AYNA KONTROL PİMİ

Code: 1028

08-11



MRC -C180 ÖN SOL CAM KRİKO SETİ  
WINDOW LEVER MECHANIS CABLE SET(LEFT)

Code: 1029

2008-2011



MRC -C180 ÖN SAĞ CAM KRİKO SETİ  
WINDOW LEVER MECHANIS CABLE SET(RIGHT)

Code: 1030



Code: 1031



Code: 1032



Code: 1033



Code: 1034



Code: 1035



**Code: 1100**

1992-98



Universal


**E 30 - E 36 CAM KRİKO PLASTİĞİ**  
**WINDOW LEVER PLASTIC**
**Code: 1101**

1998-05



Universal


**E 46 ÖN CAM KRİKO HALATI**  
**FRONT WINDOW LEVER CABLE**  
 316 - 318 - 320 - 330

**Code: 1102**

1995-03



Universal


**E 30 CAM KRİKO MAKARASI**  
**BACK WINDOW LEVER PULLEY**
**Code: 1103**

1995-03



Universal


**E 30 ARKA CAM KRİKO ZAMAĞI**  
**BACK WINDOW LEVER ZINC**
**Code: 1104**

1998-05



Universal


**E 46 ÖN CAM KRİKO HALAT SETİ**  
**FRONT WINDOW LEVER CABLE SET**
**Code: 1105**

1998-05


**E 46 ARKA CAM KRİKO HALAT SETİ**  
**BACK WINDOW LEVER CABLE SET**
**Code: 1106**

1998-05


**E 46 CAM KRİKO HALAT SETİ**  
**BACK WINDOW LEVER CABLE SET**
**Code: 1107**

1998-05



Universal


**E 46 ÖN CAM KRİKO PLASTİĞİ**  
**KAPI 1-SOL-SAĞ AYNI**  
**FRONT WINDOW LEVER PLASTIC**
**Code: 1108**

1998-05



Universal


**E 46 ÖN CAM KRİKO PLASTİĞİ**  
**KAPI 2-SOL-SAĞ AYNI**  
**FRONT WINDOW LEVER PLASTIC**
**Code: 1109**

1998-05


**E 46 ARKA CAM KRİKO PLASTİĞİ**  
**BACK WINDOW LEVER PLASTIC**
**Code: 1110**

1998-05



**E 46 ARKA CAM KRİKO PLASTİĞİ**  
**BACK WINDOW LEVER PLASTIC**
**Code: 1111**

1998-05


**E 46 CAM KRİKO MAKARASI SOL**  
**BACK-FRONT WINDOW LEVER BOBİN(L)**

Code: 1112

95-98

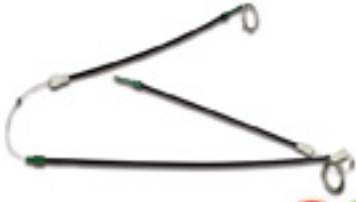

Universal

R L

E 39 ESKİ MODEL ÖN CAM KRİKO HALATI  
OLD MODEL FRONT WINDOW LEVER CABLE

Code: 1113

95-03



Universal

R L

E 39 ARKA CAM KRİKO HALATI  
BACK WINDOW LEVER CABLE

Code: 1114

1995-2003



L

E 39 ARKA CAM KRİKO HALAT SETİ  
BACK WINDOW LEVER CABLE SET

Code: 1115

95-03



R

E 39 ARKA CAM KRİKO HALAT SETİ  
BACK WINDOW LEVER CABLE SET

Code: 1116

99-07



Universal

R L

BMW X 5 CAM KRİKO MAKARASI  
WINDOW LEVER PULLEY

Code: 1117

1998-2005



Universal

R L

CAM KRİKO KIZAK MAKARASI  
WINDOW LEVER SKID PULLEY

Code: 1118

98-05



Universal

R L

CAM KRİKO MOTOR DİŞLİSİ  
WINDOW LEVER MOTOR GEAR

Code: 1119

99-07



L

BMW X5 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC

Code: 1120

1999-2007



R

BMW X5 ÖN CAM KRİKO PLASTİĞİ  
FRONT WINDOW LEVER PLASTIC

Code: 1121



Universal

R L

E 46 MOTOR GERĞİ PLASTİĞİ KISA  
ENGINE TENSION PLASTIC-SHORT

Code: 1122



Universal

R L

E 46 MOTOR GERĞİ PLASTİĞİ UZUN  
ENGINE TENSION PLASTIC - LONG

Code: 1123



Universal

R L

210 KASA CAM KRİKO HALAT SETİ  
WINDOW LEVER CABLE SET

Code: 1124

96-99

Code: 1125

05-2010

Code: 1126

2005-2010



R L



L



R

BMW E 39 ARKA CAM PLASTİĞİ  
REAR WINDOW LEVER PLASTIC-UNIVERSAL

BMW E 90-YENİ KASA ARKA PLASTİK  
REAR WINDOW LEVER PLASTIC -LEFT

BMW E 90-YENİ KASA ARKA PLASTİK  
REAR WINDOW LEVER PLASTIC-RIGHT

Code: 1127

03-2010

Code: 1128

03-2010

Code: 1129



L



R



BMW X 3 ÖN SOL CAM KRİKO PLASTİK  
FRONT WINDOW LEVER PLASTIC -LEFT

BMW X 3 ÖN SAĞ CAM KRİKO PLASTİK  
FRONT WINDOW LEVER PLASTIC-RIGHT

BMW E-34-E 39 KONTAK ŞAFTI  
BMW E-34-E 39 CONTACT ZINC

Code: 1130

Code: 1131

Code: 1132



BMW X 5 KAPI KİLİT BURCU  
DOOR LOCKS ZINC



BMW E 46 KAPI KİLİT BURCU  
DOOR LOCKS ZINC




BMW KASA-3-5 KAPI KARŞILIK ZİVİCİ  
DOOR LOCK SWITCH

Code: 1133

Code: 1134

Code: 1135

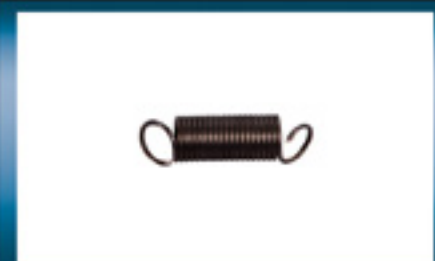

BMW 5.20 BAGAJ KİLİT YAYI  
SPRING FOR BMW LUGGAGE LOCKS



BMW E 46 SANROF TAMİR SETİ  
BMW E 46 SANROF REPAIR CIT



BMW E36-E 39 SANROF TAMİR SETİ  
BMW E36-E39 SANROF REPAIR CIT

Code: 1136


98-05



BMW E 46 ARKA CAM KRİKO HALATI  
REAR WINDOW LEVER CABLE -UNIVERSAL

Code: 1137

05-2010

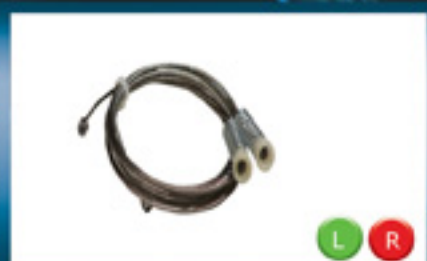

BMW E 90-YENİ KASA ARKA HALAT  
REAR WINDOW LEVER CABLE (LR)

Code: 1138

2003-2010



BMW X 5 ARKA SOL CAM KRİKO SETİ-SOL  
REAR WINDOW LEVER CABLE SET -LEFT

Code: 1139

03-2010



BMW X 5 ARKA SOL CAM KRİKO SETİ-SAĞ  
REAR WINDOW LEVER CABLE SET -RIGHT

Code: 1140

03-2010



BMW E46 CABRİO SOL CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SET(L)

Code: 1141

03-2010



BMW E46 CABRİO SAĞ CAM KRİKO SETİ  
FRONT WINDOW LEVER CABLE SET(R)

Code: 1142


1998-2005



BMW E 46 COUPE ÖN CAM HALATI  
WINDOW LEVER MECHANISM CABLE

Code: 1143

03-2007

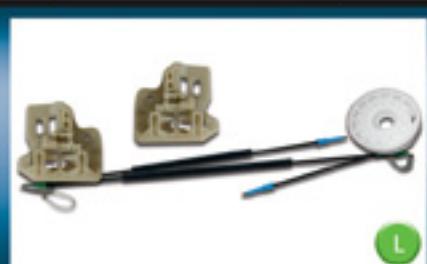

BMW X5 ÖN CAM KRİKO SETİ-SOL  
WINDOW LEVER MECHANISM CABLE(L)

Code: 1144

03-2007



BMW X5 ÖN CAM KRİKO SETİ-SAĞ  
WINDOW LEVER MECHANISM CABLE(R)

Code: 1145

1998-2005



BMW E46 COMPACT CAM KRİKO SETİ-SOL  
WINDOW LEVER MECHANISM CABLE SET(L)

Code: 1146

1998 - 2005



BMW E46 COMPACT CAM KRİKO SETİ-SAĞ  
WINDOW LEVER MECHANISM CABLE SET(R)

Code: 1147

1998 - 2007



BMW E 46 ÖN SOL KAPI KİLİT BURCU  
DOOR LOCK CIT-(LEFT)

Code: 1148

98-05

Code: 1149

03-2007

Code: 1150

2003-2007



BMW E 46 KAPI KILIT TAMİRTAKIMI-SAĞ  
DOOR LOCK SET (RIGHT)

BMW X5 KAPI KILIT TAMİRTAKIMI-SAĞ  
DOOR LOCK SET (RIGHT)

BMW X5 KAPI KILIT TAMİRTAKIMI-SAĞ  
DOOR LOCK SET (RIGHT)

Code: 1151

03-2007

Code: 1152

98-2005

Code: 1153

98-2005



BMW X5 CAM KRİKO MAKARA-SOL-SAĞ  
FRONT WINDOW LEVER BOBIN (LR)

BMW E 46 CAM DENGİ PLASTİĞİ-SOL SAĞ  
WINDOW LEVER PLASTIC (LEFT-RIGHT)

BMW E46 COMPAC CAM KRİKO MAKARA  
FRONT WINDOW LEVER BOBIN (LR)

Code: 1154

1998-2005

Code: 1155

06-2011

Code: 1156

2005-2011



BMW E 46 COMPAC CAM KRİKO PLS  
WINDOW LEVER MECHANISM PLASTIC

BMW E90 ARKA CAM KRİKO SETİ-SOL  
WINDOW LEVER MECHANISM CABLE(L)

BMW E90 ARKA CAM KRİKO SETİ-SAĞ  
WINDOW LEVER MECHANISM CABLE(R)

Code: 1157

Code: 1158

Code: 1159



BMW X3 ARKA CAM KRİKO SETİ-SOL  
WINDOW LEVER MECHANISM CABLE(L)

BMW X3 ARKA CAM KRİKO SETİ-SAĞ  
WINDOW LEVER MECHANISM CABLE(R)

Code: 1300



HYUNDAI KÖŞE PLASTIĞI-SOL  
SKIP ROTOR PLASTIC(LEFT)

Code: 1301



HYUNDAI KÖŞE PLASTIĞI-SAĞ  
SKIP ROTOR PLASTIC(RIGHT)

Code: 1302



HYUNDAI ACCENT ÖN HALATI-SOL  
WINDOW MECHANISM CABLE(LEFT)

Code: 1303



HYUNDAI ACCENT ÖN HALATI-SOL  
WINDOW MECHANISM CABLE(LEFT)

Code: 1304



HYUNDAI ACCENT ÖN HALATI-SOL  
WINDOW MECHANISM CABLE SET (L)

Code: 1305



HYUNDAI ACCENT ÖN HALATI-SAĞ  
WINDOW MECHANISM CABLE SET(R)

Code: 1306



HYUNDAI ACCENT ÖN CAM MAKARASI  
WINDOW MECHANISM BOBIN(LR)

Code: 1307



HYUNDAI ACCENT ÖN CAM PLAS-SOL  
WINDOW MECHANISM PLASTIC (L)

Code: 1308



HYUNDAI ACCENT ÖN CAM PLAS-SAĞ  
WINDOW MECHANISM PLASTIC (R)

Code: 1309



HYUNDAI STAREX ÖN HALATI-SOL  
WINDOW MECHANISM CABLE(LEFT)

Code: 1310



HYUNDAI STAREX ÖN HALATI-SAĞ  
WINDOW MECHANISM CABLE(RIGHT)

Code: 1311



MAZDA 323-626 ÖN CAM MAKARASI  
WINDOW MECHANISM BOBIN(LR)



HYUNDAI - MAZDA JAPON



Code: 1608



DAF CAM KRİKO MAKARASI-SOL-SAĞ  
WINDOW MECHANISM BOBIN (LR)

Code: 1609



NEW COROLLA

TOYOTA CAM KRİKO PLASTİĞİ-SOL  
WINDOW MECHANISM PLASTIC (LEFT)

Code: 1610



NEW COROLLA

TOYOTA CAM KRİKO PLASTİĞİ-SAĞ  
WINDOW MECHANISM PLASTIC (RIGHT)

Code: 1611



ISUZU PUCK UP MAKARASI-SOL-SAĞ  
WINDOW MECHANISM SKIP BOBIN (LR)

Code: 1612



IVECO EURO ÖN CAM PLASTİĞİ-SOL  
WINDOW MECHANISM PLASTIC(LEFT)

Code: 1613



IVECO EURO ÖN CAM PLASTİĞİ-SAĞ  
WINDOW MECHANISM PLASTIC(RIGHT)

Code: 1614



IVECO CAM KRİKO MOTOR MAKARASI  
WINDOW MECHANISM BOBIN (LR)

Code: 1615



IVECO CAM KRİKO HALAT SETİ SOL  
WINDOW MECHANISM CABLE SET(L)

Code: 1616



IVECO CAM KRİKO HALAT SETİ SOL  
WINDOW MECHANISM CABLE SET(L)

Code: 2100

LADA

Code: 2101



LADA NİVA SOL KAPI İÇİN (NEW)  
WINDOW MECHANISM PLASTIC(LEFT)



LADA NİVA SAĞ KAPI İÇİN (NEW)  
WINDOW MECHANISM PLASTIC(RIGHT)



Code: 2000

96-06



FRONT

FRELANDER ÖN CAM PLASTIĞI-SOL  
WINDOW LEVER MECHANISM PLASTIC(L)

Code: 2001

96-06



FRONT

FRELANDER ÖN CAM PLASTIĞI-SAĞ  
WINDOW LEVER MECHANISM PLASTIC(R)

Code: 2002

96-06



FRONT

FRELANDER ÖN CAM MAKARASI  
WINDOW LEVER MECHANISM BOBIN(LR)

Code: 2003

96-06



REAR

FRELANDER ARKA CAM PLASTIĞI  
WINDOW LEVER MECHANISM PLASTIC(LR)

Code: 2004

96-06



REAR

FRELANDER ARKA CAM MAKARASI  
WINDOW LEVER MECHANISM BOBIN(LR)

Code: 2005

96-06



FRONT

FRELANDER ÖN CAM HALATI-SOL-SAĞ  
WINDOW LEVER MECHANISM CABLE(LR)

Code: 2006

96-06



FRELANDER ÖN CAM HALAT SETİ-SOL  
WINDOW LEVER MECHANISM CABLE SET(L)

Code: 2007

96-06



FRELANDER ÖN CAM HALAT SETİ-SAĞ  
WINDOW LEVER MECHANISM CABLE SET(R)

Code: 2008

96-06



FRELANDER ARKA CAM HALAT SET-SOL  
WINDOW LEVER MECHANISM SET (LEFT)

Code: 2009

96-06



FRELANDER ARKA CAM HALAT SET-SAĞ  
WINDOW LEVER MECHANISM SET (RIGHT)

Code: 2010

96-06



FRELANDER BAGAJ KAPAĞI HALAT TAKIMI  
REAR LUGGAGE COVER CABLE

Code: 2011

96-06



FRELANDER BAGAJ KAPAĞI HALAT TAKIMI  
REAR LUGGAGE COVER CABLE SET



# UNIVERSAL REPAIR KIT



Code: BRU01



64 mm

Code: BRU02



59mm

Code: BRU03



55 mm

Code: BRU04



58 mm

Code: BRU05



48 mm

Code: BRU06



42 mm

Code: BRU07



45 mm

Code: BRU08



27 mm

Code: BRU09



21 mm

Code: BRU010



16 mm

Code: BRU011



22,5 mm

Code: BRU012



32,5 mm

Code: BRU13



26 mm

Code: BRU014



30 mm

Code: BRU015



13 mm

Code: BRU016



CLASIC-SCANIC-CORDOBA

Code: BRU017



FORD CONNET-L

Code: BRU018



FORD CONNET-R

Code: BRU019



BMW-FRELENDER-COUPE

Code: BRU020



CLASIC-SCANIC-CORDOBA

Code: BRU021



CLASIC-SCANIC-CORDOBA

Code: BRU022



BMW -AUDI A3

Code: BRU023



BMW -E 46-LEFT

Code: BRU024



BMW E46-RIGHT

Code: BRU025



BMW E46 -R



# UNIVERSAL REPAIR KIT



Code: BRU022



VW-SEAT-SKODA

Code: BRU023



FRELANDER-GOLF 3(L)

Code: BRU024



FRELANDER-GOLF 3(R)

Code: BRU025



NEW MODEL

HYUNDAI ACCENT

Code: BRU026



OLD MODEL

HYUNDAI ACCENT

Code: BRU027



MEGANE 1-VITO-1

Code: BRU028



MEGANE 1-VITO-1

Code: BRU029



NEW OPEL CABLE PIPE

Code: BRU030



Code: BRU031



Code: YY01



38,5 mm

Code: YY02



38 mm

Code: YY03



22,5 mm

Code: YY04



21 mm

Code: YY05



frelander-Bmw-coupe

Code: PIM01



8.18X65X1.7 mm

Code: PIN02



5.5X6.7X1.7 mm

Code: PIN03



6.5X6.7X1.7 mm

Code: PIN04



5X4.5X1.7 mm

Code: PIN05



9.88X5.65X1.7 mm

Code: PIN06



OPEL-MERCEDES

Code: SP01




6X3.5 mm Spiral

Code: SP02



5X3.5 mm Spiral

Code: SP03

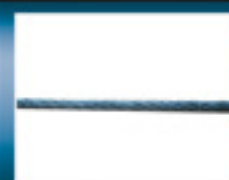

7x7.1.5 mm Steel rope

Code: SP04



Audio Cutter



# 2012

## CATALOGUE

**WINDOW LEVER MECHANISM PARTS**  
[www.alplastik.net](http://www.alplastik.net)